



v.1.0

Tree Shear

Instruction manual

TSR8EX, TSR10EX, TSR12-5EX



TABLE OF CONTENTS

1. REVISION HISTORY	1
2. GENERAL	2
2.1 About this manual.....	2
2.2 Product identification	2
2.3 Manufacturer	3
3. SAFETY.....	4
3.1 Safety symbols used in the manual	4
3.1.1 Warning symbols.....	4
3.1.2 Mandatory symbols	4
3.2 Safety signs on the product	5
3.3 Warnings and residual risks	6
3.3.1 Danger area.....	8
3.3.2 Use of personal protective equipment (PPE).....	8
3.4 Noise emissions.....	8
3.5 Product limitations.....	9
3.5.1 Intended use and prohibited use.....	9
3.5.2 Base machine	9
3.5.3 Operating temperature.....	9
4. OVERVIEW.....	10
4.1 Main components	10
4.2 Technical data and dimensions.....	11
5. INSTALLATION	12
5.1 Transportation	12
5.1.1 Fastening instructions.....	13
5.2 Lifting.....	14
5.3 Storage	14
5.4. Commissioning.....	15
5.4.1 Welding the quick coupler	15
5.4.2 Connecting the hydraulics.....	15
5.4.3 Before first use.....	16
5.5 Dismounting the tree shear	18
6. OPERATION	19
6.1 Felling a tree.....	19

6.2 Loading timber	20
6.3 Operation in case of malfunction	21
7. MAINTENANCE.....	22
7.1 Maintenance schedule, tree shear	22
7.2 Tightening torques.....	22
7.3 Maintenance instructions, tree shear.....	23
7.3.1 Checking the tightness of screws and nuts.....	23
7.3.2 Checking the tree shear for cracks or fractures.....	25
7.3.3 Checking the condition of the cutting blade	25
7.3.4 Checking for hydraulic leaks	25
7.3.5 Greasing the tree shear.....	26
7.3.6 Cleaning the tree shear	26
7.3.7 Sharpening the cutting blade	27
7.3.8 Replacing the cutting blade.....	27
7.3.9 Replacing the hydraulic hose and connector.....	29
7.4 Spare parts and maintenance contacts	29
8. OPTIONS.....	30
8.1 Optional equipment available.....	30
8.2 Adapters.....	30
8.3 360° rotation system.....	31
8.3.1 Rotator	31
8.3.1.1 Overview	31
8.3.1.2 Installation	32
8.3.1.3 Maintenance	34
8.3.2 Rotary manifold	34
8.3.2.1 Overview	34
8.3.2.2 Installation	35
8.4 Collector unit.....	35
8.4.1 Overview	35
8.4.1.1 Product identification	35
8.4.2 Installation	36
8.4.2.1 Lifting the collector unit.....	36
8.4.2.2 Installing the collector unit	37
8.4.3 Operation	38
8.4.3.1 Operating the collector unit.....	38
8.4.4 Daily maintenance	40

8.4.4.1 Greasing	40
8.4.4.2 Cleaning the collector unit	41
8.4.4.3 Checking the collector unit	41
8.5 Felling support	42
8.5.1 Overview	42
8.5.2 Installation	42
8.5.3 Daily maintenance	43
8.6 eBoost® hydraulic system	44
8.6.1 Adjustment instructions	44
9. ATTACHMENTS	45

1. REVISION HISTORY

Revision	Date	Description	Author
1.00	10.12.2025	Document created	-

2. GENERAL

2.1 About this manual

The purpose of this Instruction manual is to promote safe, proper and optimal use and maintenance of the tree shear. The manual also helps to identify, avoid and prevent hazardous situations and related consequences.

This Instruction manual is intended for the final user. If this manual is lost, damaged or becomes unreadable, contact your local dealer for a replacement copy.





Read and understand the manual carefully. Follow the given instructions. Follow the instructions in local laws and regulations and any orders given by local authorities.

This Instruction manual covers the tree shear models TSR8EX, TSR10EX, TSR12-5EX.

2.2 Product identification

The tree shear has a manufacturer's plate (1) behind the buffer plate.

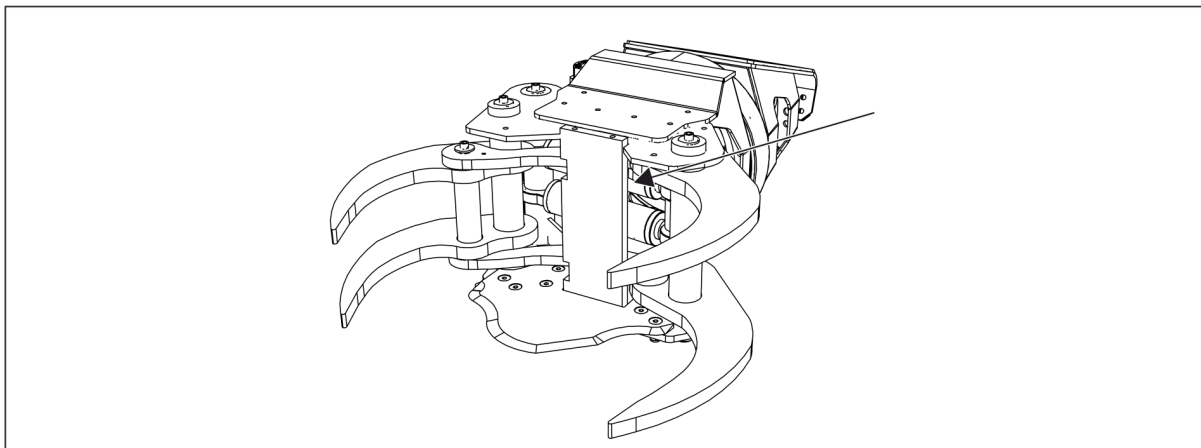

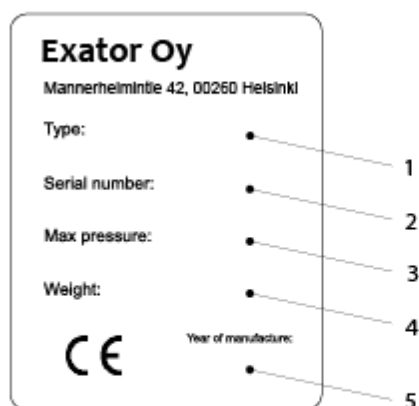

Location	Information
1	Type
2	Serial number
3	Maximum pressure
4	Weight
5	Year of manufacture

2.3 Manufacturer

Exator Oy

Mannerheimintie 42

00260 Helsinki

Finland

Telephone: +358 400 848631

Email: info@exator.fi

Web: www.exator.fi

3. SAFETY

3.1 Safety symbols used in the manual

	DANGER indicates a potentially dangerous situation that can cause death or serious injury.
	WARNING indicates a potentially hazardous situation that can cause property damage.
	NOTE contains helpful tips, advice and other useful information.

3.1.1 Warning symbols

	HANGING LOAD indicates a load that can fall and cause injuries.
	SHARP ELEMENT indicates a sharp object that can cause injuries by cuts.
	CRUSHING HAZARD indicates a situation where a person can get crushed by moving objects.
	ELECTRICAL HAZARD indicates a situation where a person can receive injuries from open electric sources.
	LIFTING HAZARD indicates a situation where lifting a heavy item can cause injuries.



3.1.2 Mandatory symbols

	INSTRUCTION MANUAL Refer to instruction manual.
	EYE PROTECTION Wear protective eye wear such as safety goggles.
	PROTECTIVE GLOVES Wear protective gloves.

3.2 Safety signs on the product

1		Obey the safety distance.
2		Read the manual.

The location of the safety signs:

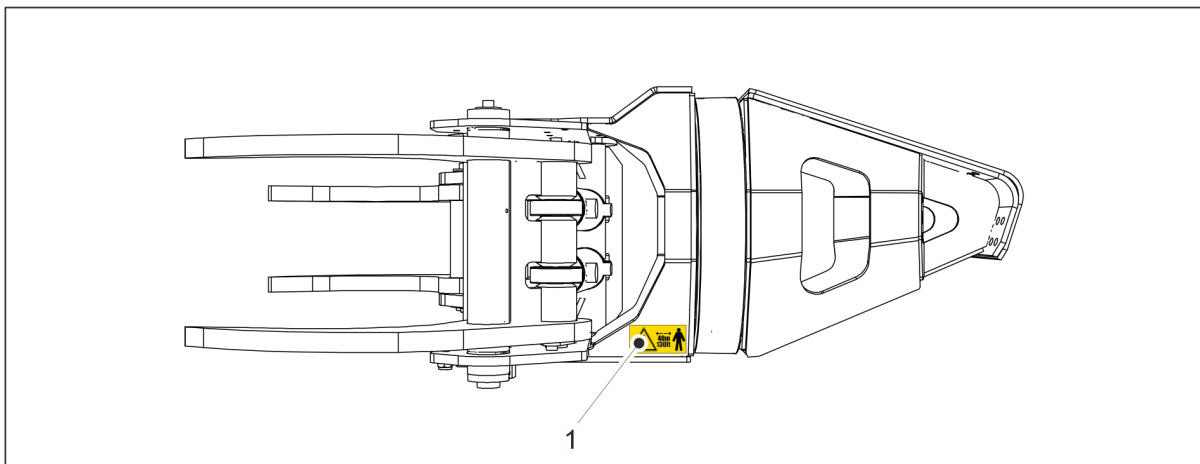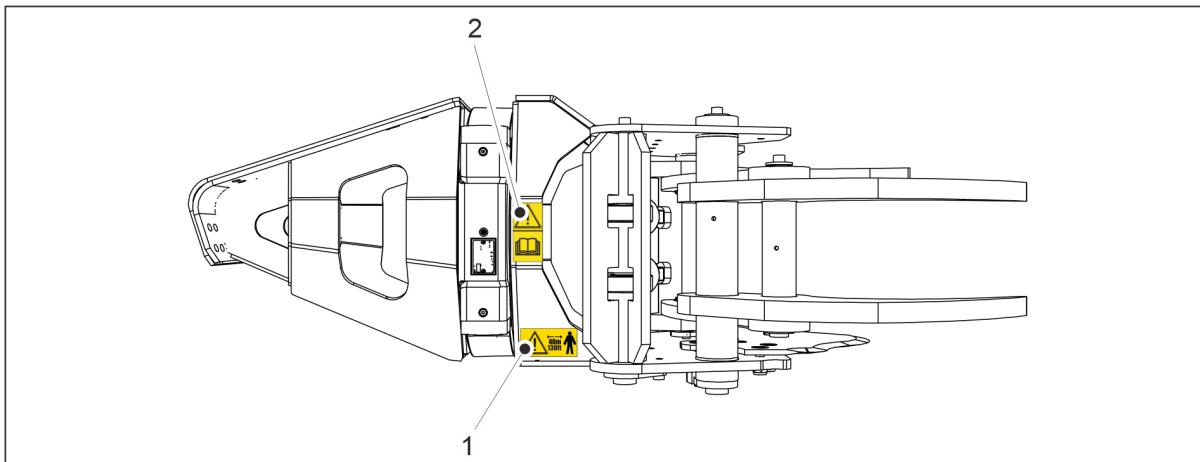


3.3 Warnings and residual risks

	DANGER Hanging load hazard The tree shear or its load can fall when lifted and cause injuries or even death. Do not stand underneath the tree shear.
	DANGER Crushing hazard Moving parts can cause injuries or even death. Observe caution near the tree shear when the hydraulic lines are connected. Do not put your hands inside the tree shear when the hydraulic lines are connected.
	DANGER Sharp blade hazard The blade can cause injuries and cuts. Observe caution when near the blade. Wear protective goggles and gloves when you sharpen the blade.
	DANGER Sharp blade hazard The blade can cause injuries and cuts. Observe caution when near the blade. Wear protective gloves when you handle the blade.
	DANGER Electricity hazard Current from electric lines can cause injuries or even death. Observe caution when you use the tree shear near electric lines.

	DANGER Unstable machinery hazard Handling of oversized trees with the tree shear can change the balance of the machine cause it to fall over. Cut and handle large trees in segments with the tree shear. Grab large trees from the middle point.
  	DANGER Hydraulic fluid High pressure hydraulic fluid can cause injury or even death. Relieve the hydraulic pressure before maintenance. Wear protective gloves and goggles when handling hydraulic fluid.
	DANGER Lifting hazard The unit is heavy and can cause injuries if lifted. Do not lift the unit on your own. Use a lifting aid.
	WARNING Damage to equipment Poor welding can break and cause the tree shear to fall down. Leave welding work for professionals. Follow local requirements and standards. The manufacturer is not responsible for the durability of welds done on the coupler by other parties.
	WARNING Damage to hydraulic hoses The hydraulic hoses can get twisted when the tree shear rotates. Use a rotary manifold to protect the hydraulic hoses.

3.3.1 Danger area

The danger area is 40 m (130 ft) around the tree shear. Ensure that no one enters this area during operation.

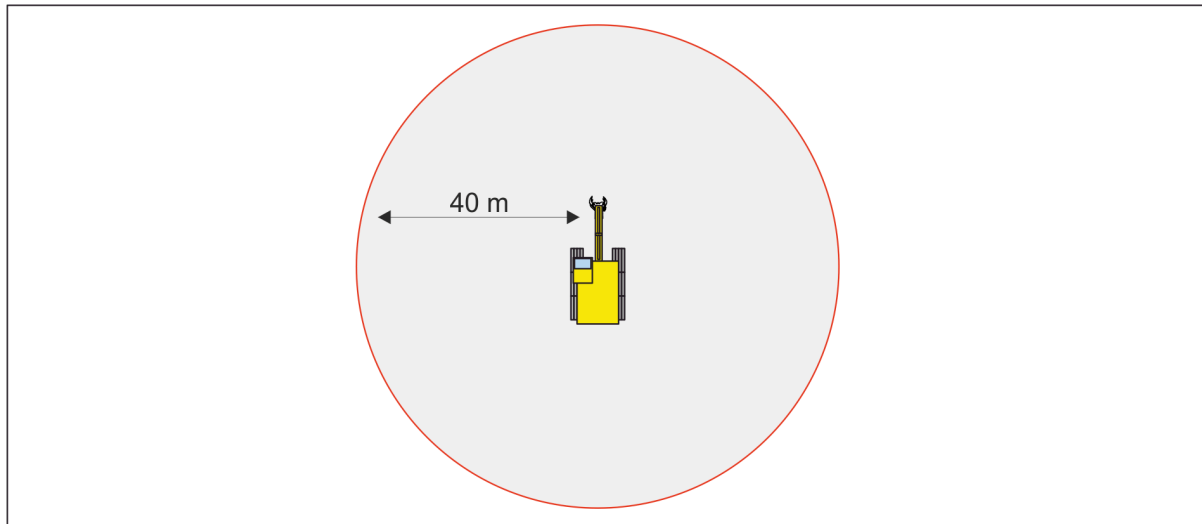

3.3.2 Use of personal protective equipment (PPE)

The danger area is 130 ft (40 m) around the tree shear. Ensure that no one enters this area during operation.



NOTE

Wear protective goggles when you sharpen the blade and when you work with hydraulic lines.



NOTE

Wear protective gloves when you sharpen or handle the blade and when you work with hydraulic lines.

3.4 Noise emissions

The A-weighted emission sound pressure level of the tree shear is 68 dB (<70 dB), measured at 1 m distance during operation.

3.5 Product limitations

3.5.1 Intended use and prohibited use

Intended use

The tree shear is intended for efficient cutting and loading trees. It is used for clearing trees and bushes along roads, electrical lines and ditches, as well as in parks and near houses. The model designation indicates the maximum cutting width of the tree shear.

The tree shear has two hydraulically controlled jaws that can be opened and closed. When the cutting blade is attached the tree shear is used for cutting and stacking trees. When the blade is removed the tree shear can be used for loading timber.

Prohibited use

Do not use the tree shear for handling any other materials than timber.

Do not cut trees that are thicker than specified for the tree shear model.

Do not modify the tree shear in any way not specified by the manufacturer such as welding, cutting or drilling holes to it.



NOTE

Prohibited use voids the warranty of the tree shear.

3.5.2 Base machine


The TSR8EX and TSR10EX tree shears are intended for excavators, wheel loaders, telescopic handlers and Avant loaders. The TSR12-5EX is intended for excavators, wheel loaders and telehandlers. The same tree shear can be used on different base machines by changing the adapter.

3.5.3 Operating temperature

It is not recommended to use the tree shear in temperatures under 5 ° Fahrenheit (-15 ° Celsius). Colder temperatures can cause metal fatigue on the tree shear.

4. OVERVIEW

4.1 Main components

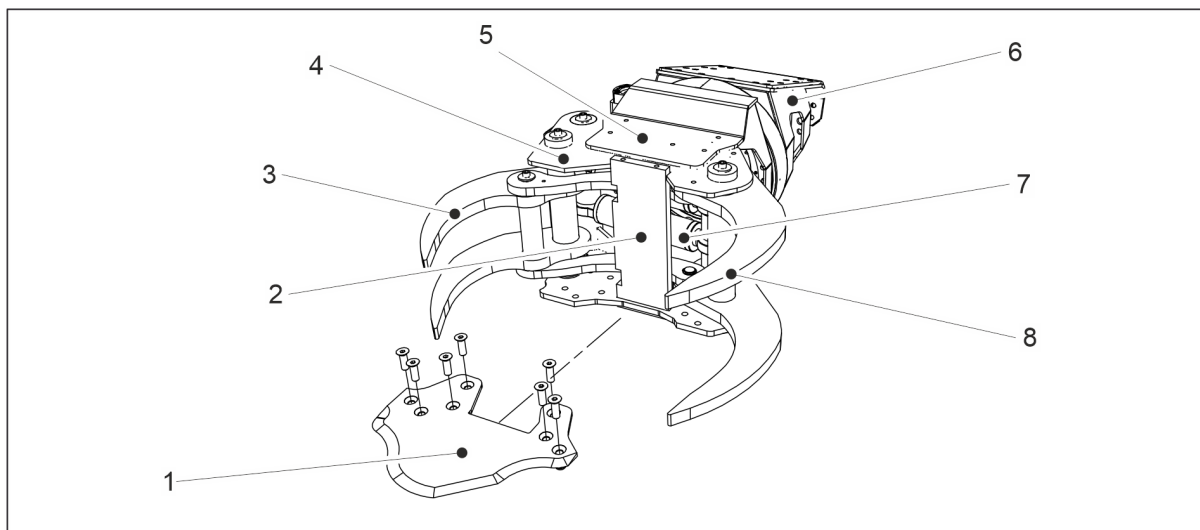

1.	Cutting blade
2.	Buffer plate
3.	Assisting side jaw
4.	Main body
5.	Top mounting surface
6.	Adapter (different options available)
7.	Hydraulic cylinders
8.	Cutting side jaw

4.2 Technical data and dimensions

Product name	TSR8EX	TSR10EX	TSR12-5EX
Excavator weight	4000-11000 lbs	11000-26455 lbs	26455-44092 lbs
Wheel loader weight	2866-5511 lbs	6613-13227 lbs	13227-46297 lbs
Telehandler lifting capacity	992 lbs	1984 lbs	2866 lbs
Avant loader weight	2866-5511 lbs	6613-13227 lbs	
Weight	308 lbs	595 lbs	1300 lbs
Height	15.7 in	19.6 in	23.6 in
Cutting diameter	8 in	10 in	12.5 in
Operating pressure	2900-4351 psi	3625-4351 psi	3625-4351 psi
Minimum oil flow	7.9 gal/min	13.2 gal/min	15.8 gal/min
Width when open	23.6 in	27.1 in	33 in
Buffer plate height	12 in	15.3 in	19.8 in
Excavator adapter weight	64 lbs	123 lbs	227 lbs
Multimount adapter weight	101 lbs	125.6 lbs	235 lbs
Avant adapter weight	61.7 lbs	77.16 lbs	

5. INSTALLATION

5.1 Transportation

Transport the tree shear in horizontal position. During transportation the jaws must be closed so that the cutting blade is covered by the jaws.

Fasten the tree shear to the transportation baseplate with cargo straps. To select suitable cargo straps, consider that:

- The tree shear has sharp edges. Use coated cargo straps.
- The tree shear and attached optional equipment are heavy. Make sure the cargo straps withstand the weight.




NOTE

Make sure the cargo straps cannot damage the hydraulic lines during transportation.


5.1.1 Fastening instructions

Tie the tree shear to the baseplate:

From behind the buffer plate (2) with cargo straps (1).

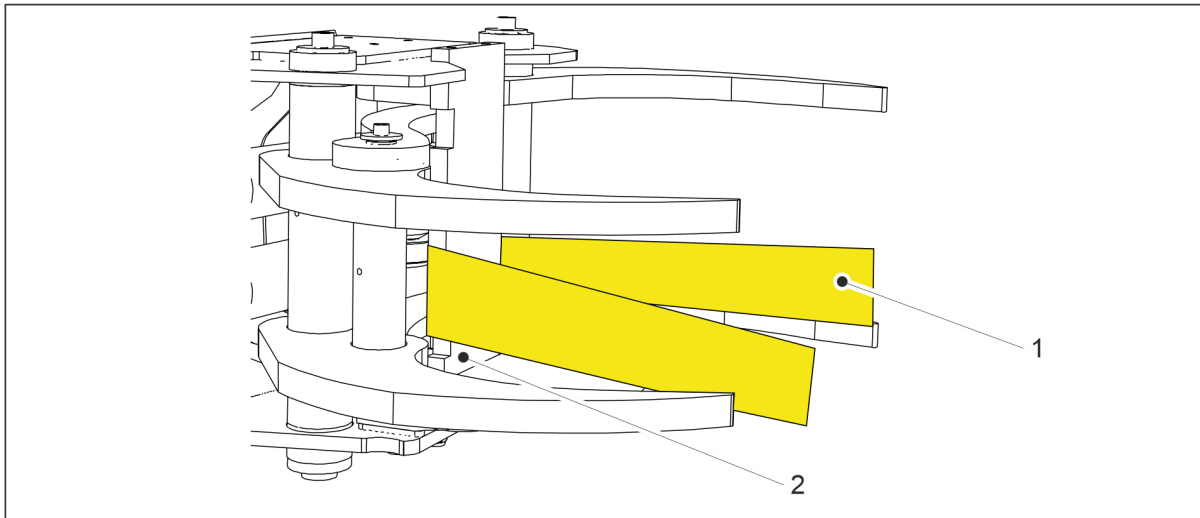

Through the back opening with a cargo strap (1).

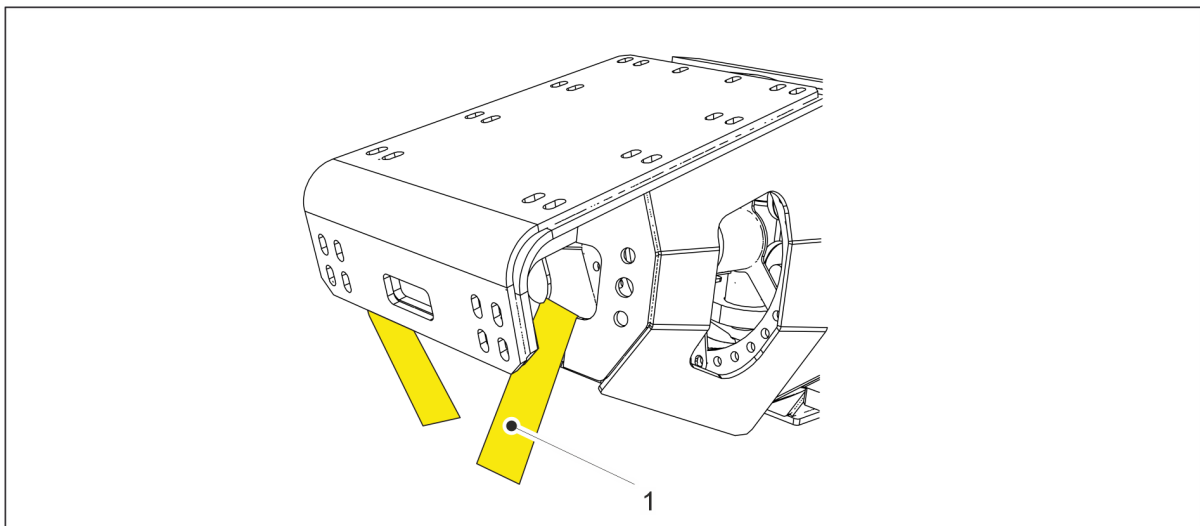

5.2 Lifting



DANGER

Hanging load hazard

The tree shear or its load can fall when lifted and cause injuries or even death. Do not stand underneath the tree shear.



NOTE


Make sure that the lifting belt or chain cannot damage the hydraulic lines during lifting.

During lifting the jaws must be closed so that the cutting blade is covered by the jaws.

Lift the tree shear with a lifting belt or chain. To select a suitable lifting belt or chain, consider that:

- The tree shear has sharp edges.
- The tree shear and attached optional equipment are heavy. Make sure the lifting belt or chain can withstand the weight.

Run a lifting belt (1) or chain through the opening in the middle. The tree shear remains balanced when lifted from the middle opening.

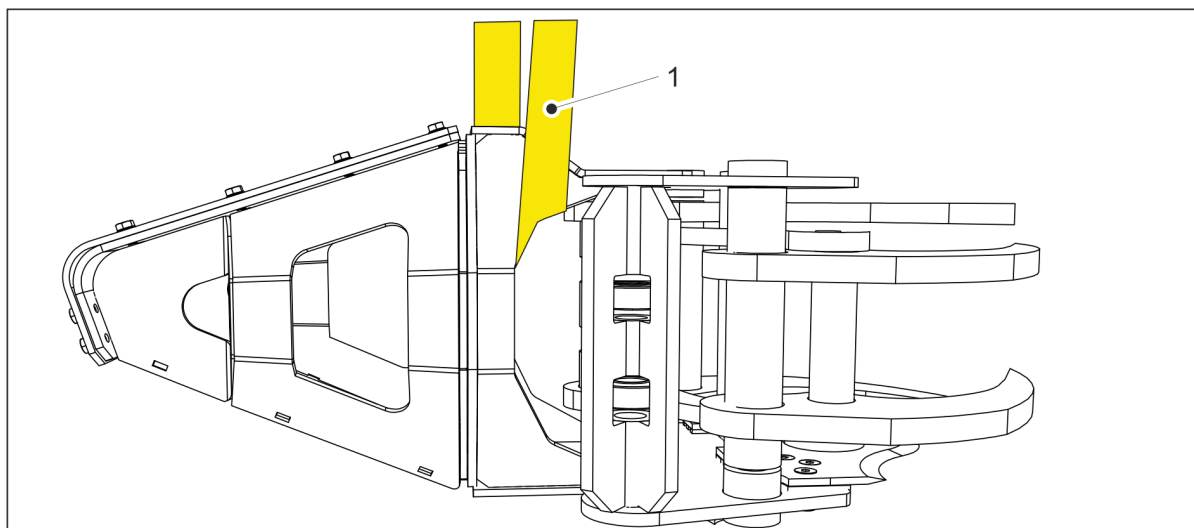

5.3 Storage

Before storage:

- Wash the tree shear with a pressure washer.
- Apply grease to the grease nipples.

Storage conditions:

- Store the tree shear indoors when possible.
- If the tree shear is stored outdoors, cover it with a waterproof tarpaulin.
- Close the hydraulic lines with caps.

Storage position:

- Store the tree shear on a stable flat surface.
- For safety reasons, close the jaw to ensure the blade is covered by the jaws.

Long-term storage:

- Check that there is grease in the grease nipples at least once per year.
- If the tree shear is taken into use after a long storage period, perform the before first use checks again. See chapter 5.4.3 Before first use

5.4. Commissioning

5.4.1 Welding the quick coupler

The tree shears can be equipped with common excavator quick couplers. Couplers are also available according to order.

If the tree shear is delivered without a quick coupler, obey the following precaution for welding the quick coupler.

	WARNING Damage to equipment Poor welding can break and cause the tree shear to fall down. Leave welding work to professionals. Follow local requirements and standards. The manufacturer is not responsible for the durability of welds done on the coupler by other parties.
---	--


	NOTE Do not modify the tree shear in any way not specified by the manufacturer such as welding, cutting or drilling holes to it.
---	---

5.4.2 Connecting the hydraulics

	DANGER Crushing hazard Moving parts in the tree shear can cause injuries or even death. Observe caution near the tree shear when the hydraulic lines are connected. Do not put your hands inside the tree shear when the hydraulic lines are connected.
---	--

Tree Shear	Hydraulic connector
TSR8EX	R 3/8"
TSR10EX	R 1/2"
TSR12-5EX	R 3/4"


1. Ensure that the hydraulic lines in the base machine are pressure free. For safe work methods, see the instruction manual of the base machine.
2. Connect the inflow and outflow hydraulic lines. On the excavator adapter, the connectors are located on the right (1) and left (2) side of the adapter. On the multimount and Avant adapters, the connectors are on top of the adapter.

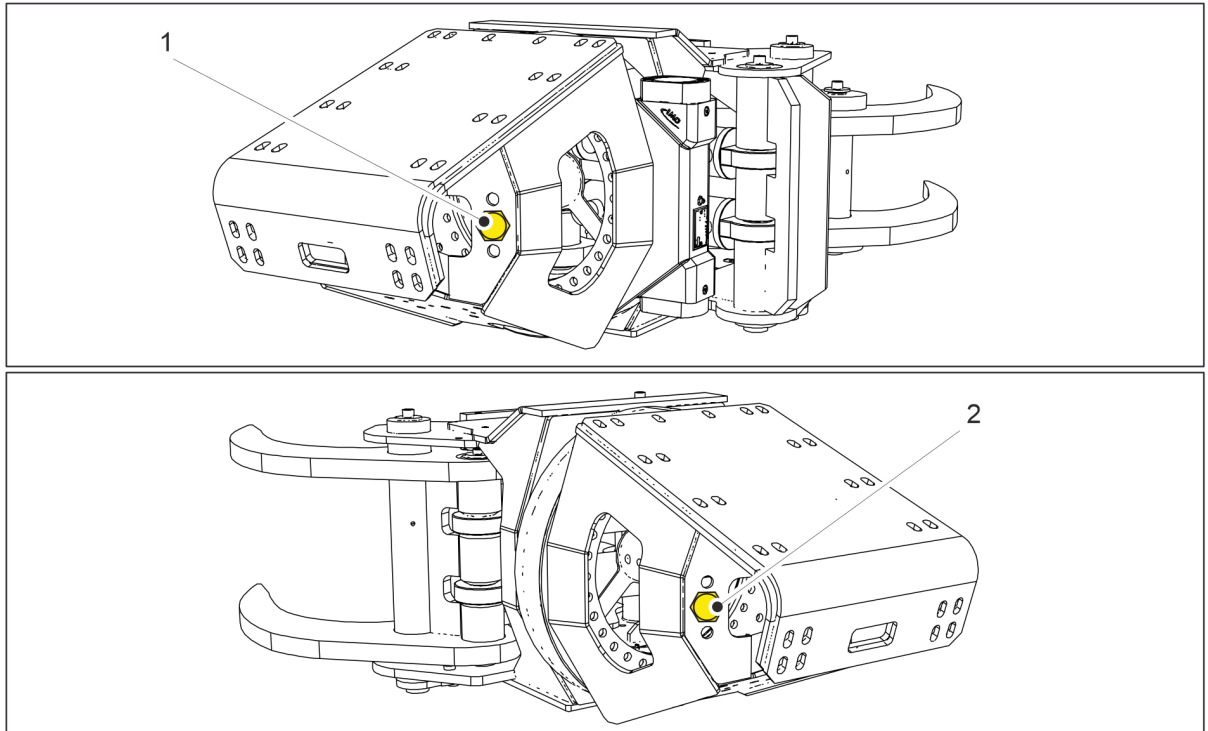


3. Open and close the jaws to ensure that the hydraulic lines are connected in the intended order.
4. Measure the hydraulic pressure before using the tree shear. Target pressure is the maximum pressure of the tree shear model. The opening and closing speed of the jaws is dependent on the hydraulic oil flow of the base machine.

5.4.3 Before first use


1. If you installed the excavator adapter, check the tightness of the quick coupler bolts and nuts (1-10). The quantity of the bolts and nuts varies according to the tree shear size.

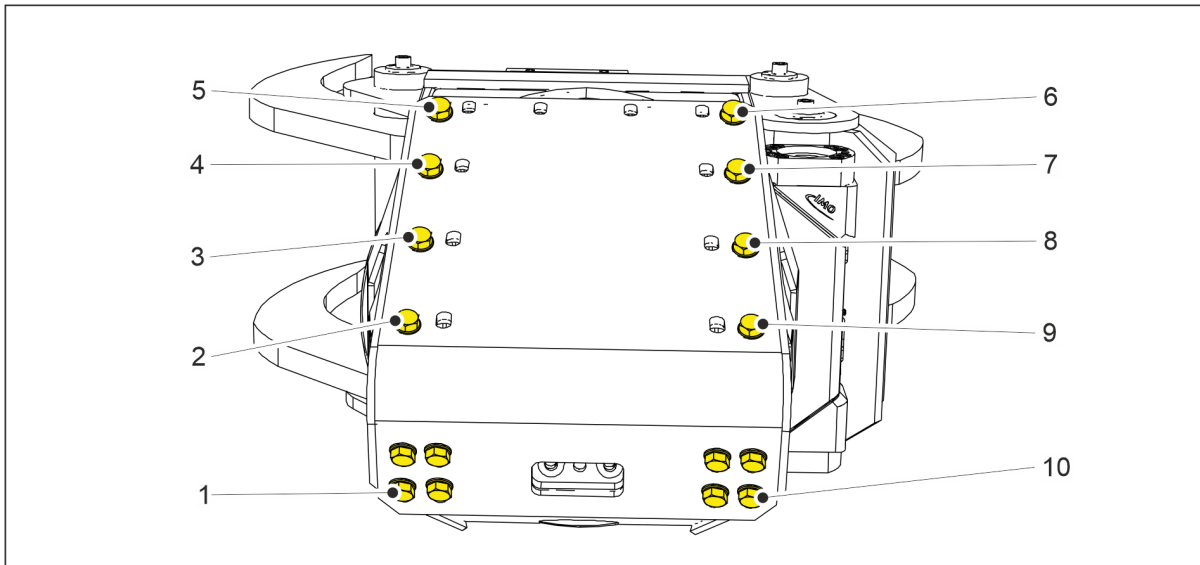


2. Check the tightness of the top bolts (1-4).

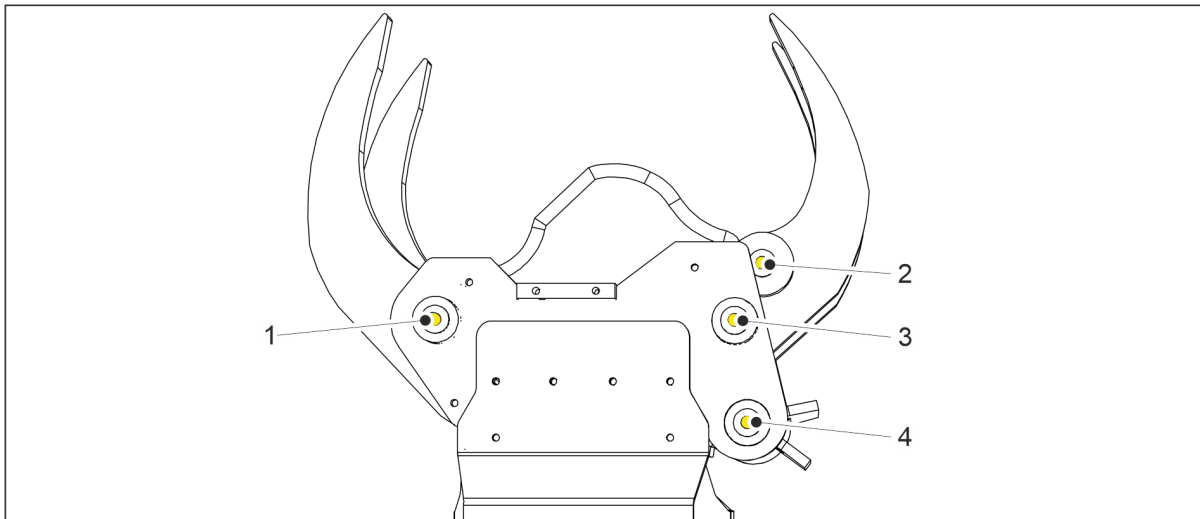


3. Check the tightness of the adapter bolts (1).

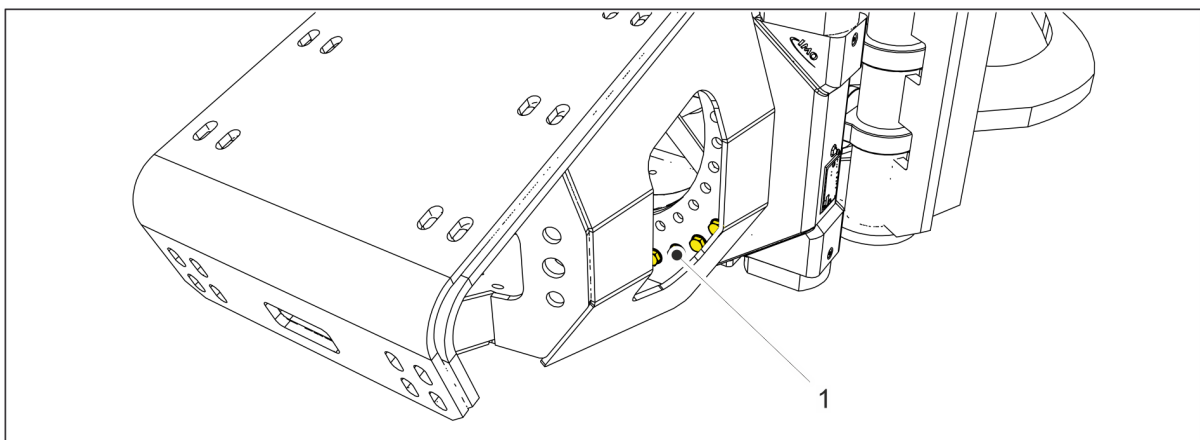

4. Check the tightness of the cutting blade bolts (1-7).

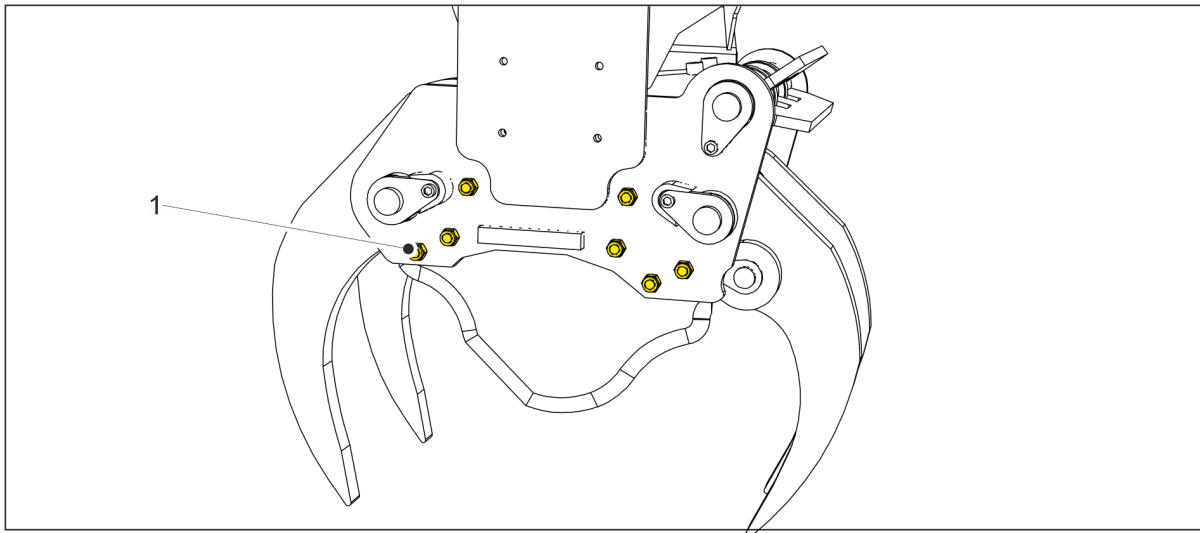

5. Check the tightness of the bottom bolts (1-3).

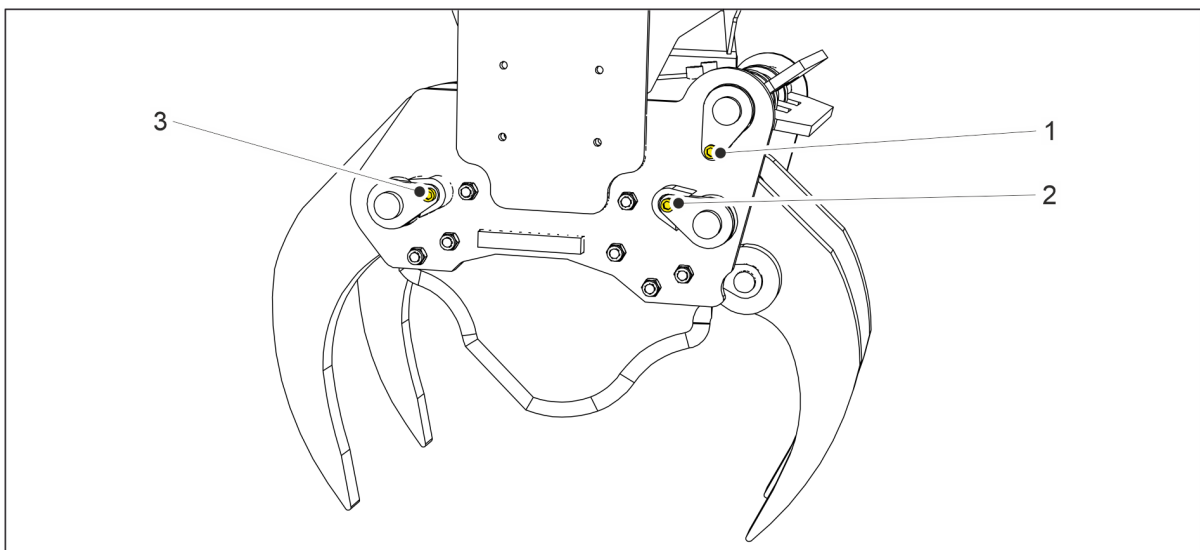

6. Apply grease to the grease nipples. See section 7.3.5 Greasing the tree shear.

5.5 Dismounting the tree shear

1. Close the jaws almost shut so that the cutting blade is covered by the jaws.
2. Lower the tree shear to the ground or transportation vehicle.
3. Relieve pressure from the hydraulic lines. For safe work methods, see the instruction manual of the base machine.



NOTE

Oil can leak from the hydraulic lines when they are detached.

4. Detach the hydraulic lines. Close the hydraulic lines with caps.
5. Detach the quick coupler from the base machines.

6. OPERATION

6.1 Felling a tree



DANGER

Falling tree hazard

Felled tree can cause damage, injuries or even death if it hits objects or people.

Always fell the tree in direction away from the base machine and buildings.



DANGER

Electricity hazard

Current from electric lines can cause injuries or even death. Observe caution when you use the tree shear near electric lines.



DANGER

Unstable machinery hazard

Handling of oversized trees with the tree shear can change the balance of the machine and cause it to fall over.


Cut and handle large trees in segments with the tree shear. Grab large trees from the middle point.




NOTE

If the wood is hard or the hydraulic pressure is low, it is possible that the tree shear cannot cut a tree of maximum width.

1. Lower the tree shear to the base of the tree.
2. Turn the tree shear until the cutting blade (2) is at 90 degree angle towards the tree

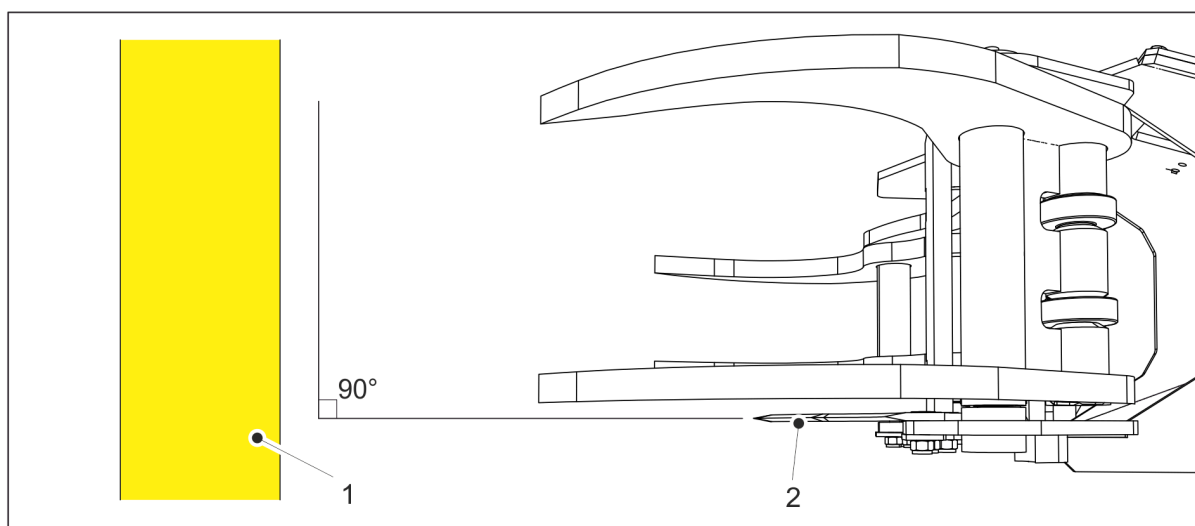

3. Place the tree (2) between the cutting side jaw (1) and the cutting blade (3).

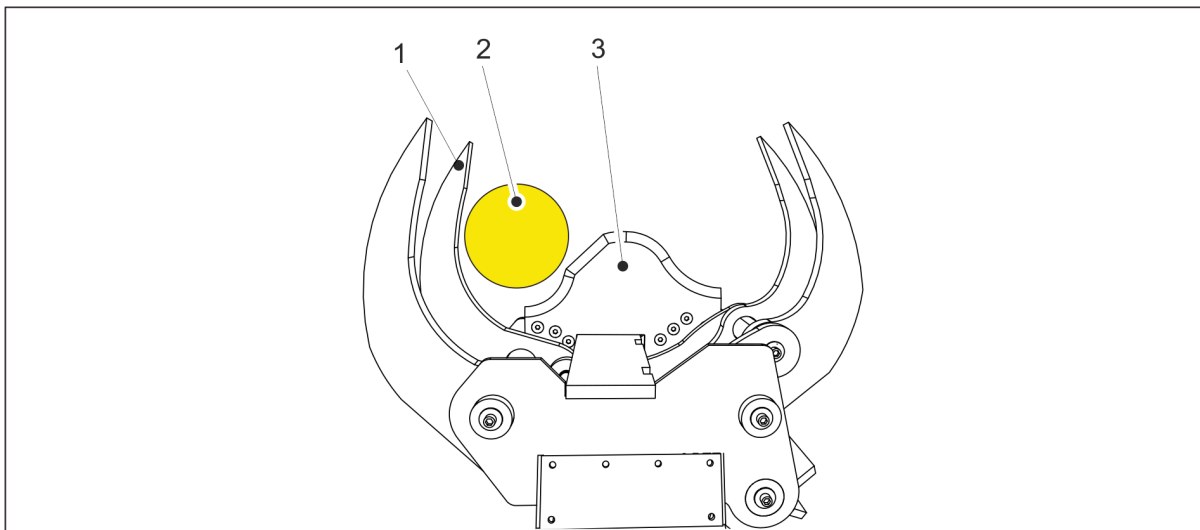

4. Close the jaws to press the tree against the blade. This will cut the tree.

5. Move the tree to a stacking location on the ground.

6. To release the tree, open the jaws.

6.2 Loading timber

When the cutting blade is detached, the tree shear can be used for loading timber. See chapter 7.3.8 Replacing the cutting blade for how to detach the blade.

- Move the tree shear to the midpoint of the timber stack. Grabbing the tree from the middle will help to balance the machine.
- Close the jaws so that the timber is firmly in the tree shear.

6.3 Operation in case of malfunction

Malfunction	Action
Tree shear cannot cut a tree and becomes stuck	Do not open the jaw of the tree shear. Do not approach a tree that is partially cut. Try to fell the tree away from the machine by pushing it with the machine. Check that the tree shear is not damaged before you use the tree shear again.
Branches or debris in the tree shear	Before removing branches or debris: • Lower the tree shear to the ground. • Turn off the base machine.
Cutting blade detaches from the tree shear	Lower the tree shear to the ground. Turn off the base machine. Ensure that the blade and its bolts are not damaged before reattaching the blade.
Hydraulic fault, jaws do not open or close	Relieve the hydraulic pressure. Check for leaks in the connectors and lines. Replace any faulty connectors or lines.

7. MAINTENANCE

7.1 Maintenance schedule, tree shear

Task	Interval
Check the tightness of screws and nuts.	Daily
Check that there are no cracks or fractures.	Daily
Check the condition of the blade.	Daily
Check that there are no hydraulic leaks.	Daily
Grease the tree shear.	Daily
Clean the tree shear.	When needed
Sharpen the blade.	When needed
Replace the blade.	When needed

7.2 Tightening torques

Class 8.8 bolt	Tightening torque
M10	43 Nm
M12	75 Nm
M16	181 Nm
M20	353 Nm

7.3 Maintenance instructions, tree shear




NOTE


Before performing any maintenance, lower the tree shear to the ground and turn off the base machine.

7.3.1 Checking the tightness of screws and nuts


1. If you installed the excavator adapter, check the tightness quick coupler bolts and nuts (1-10). The quantity of the bolts and nuts varies according to the tree shear size.

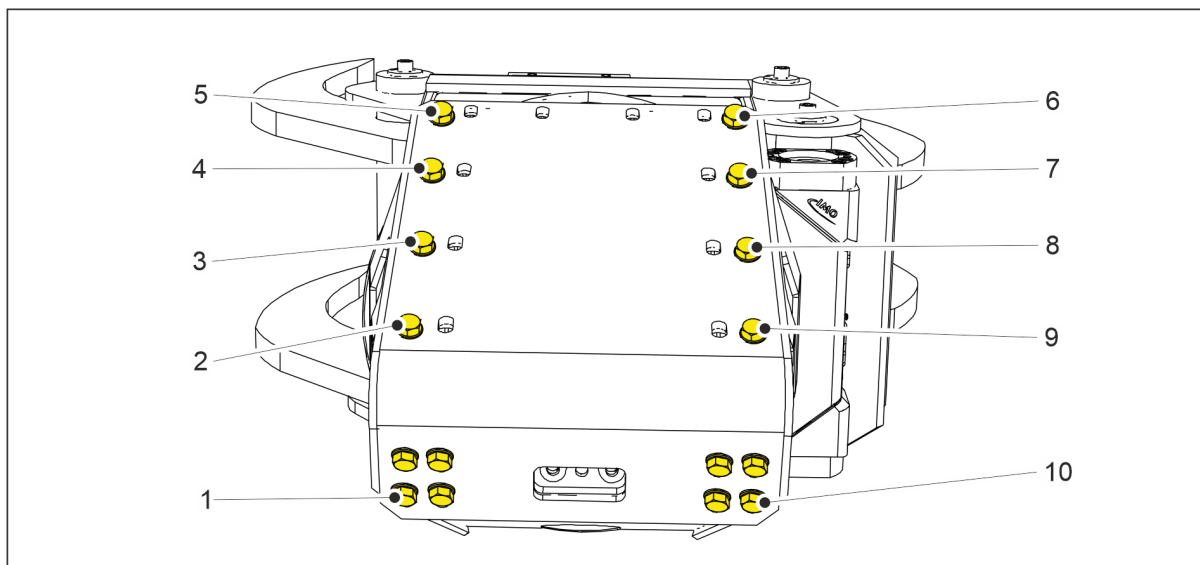


2. Check the tightness of the top bolts (1-4).

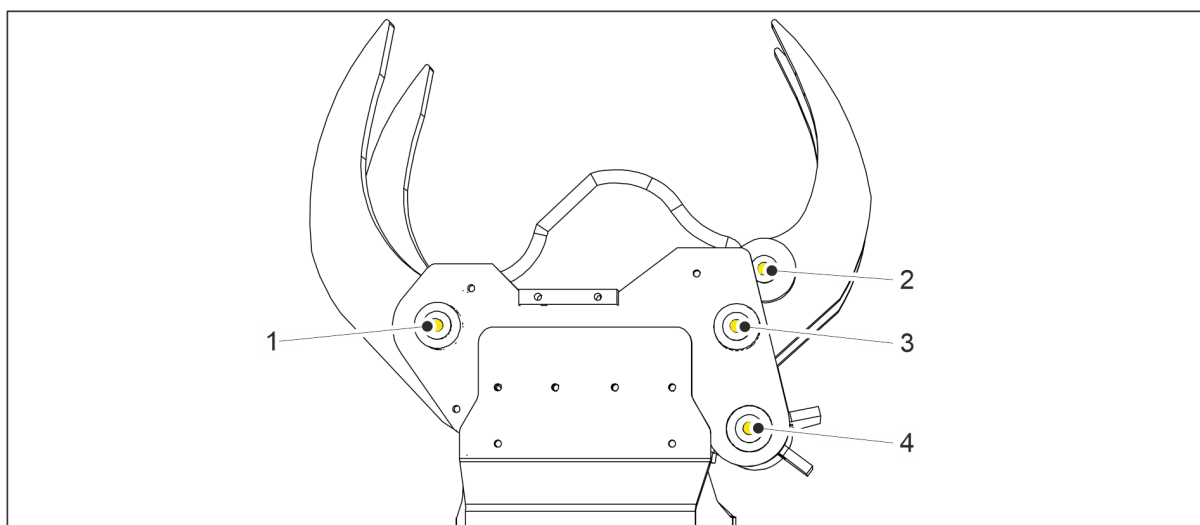


3. Check the tightness of the adapter bolts (1). The quantity of the bolts and nuts varies according to the tree shear size.

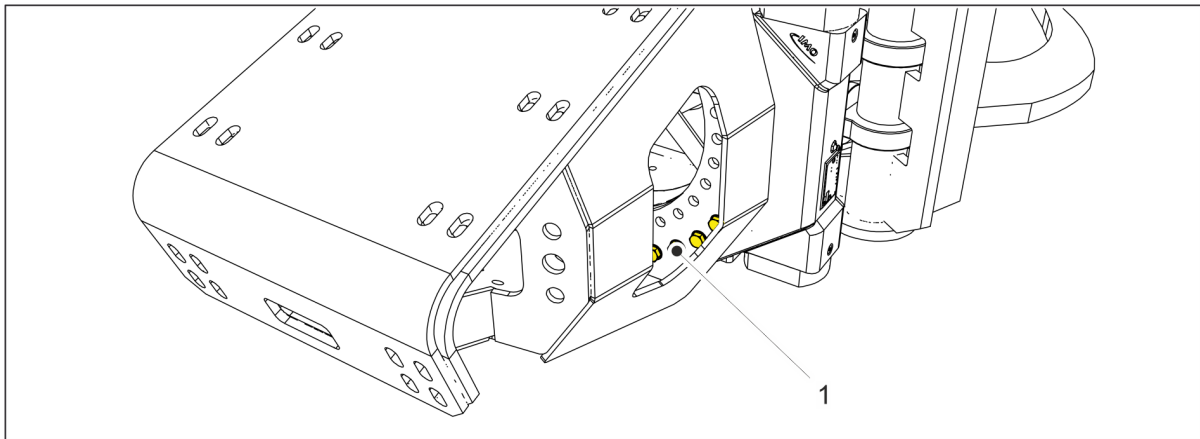

4. Check the tightness of the bottom bolts (1-3).

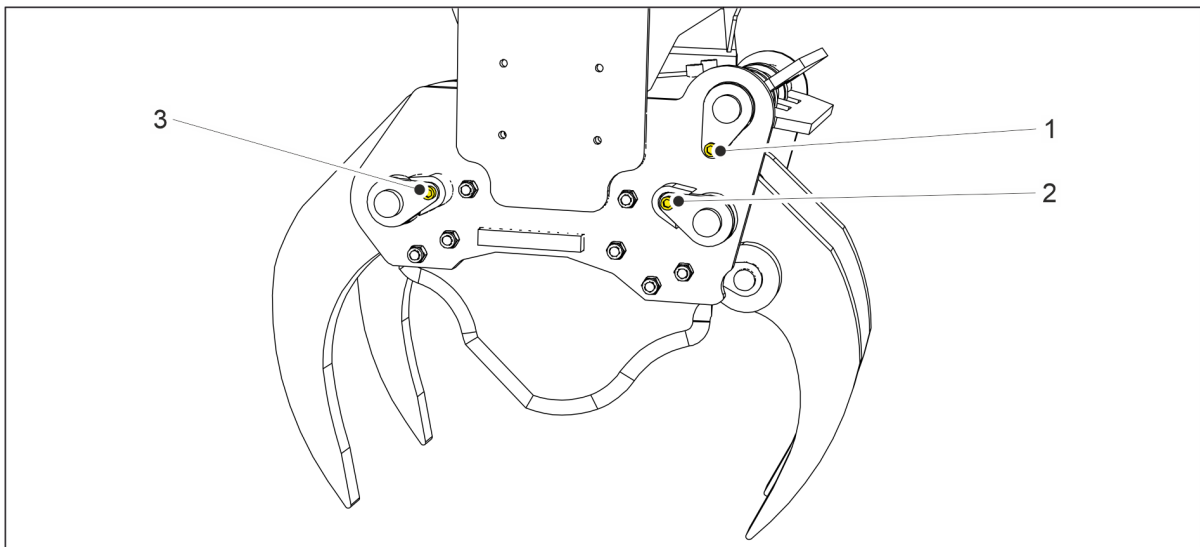

5. Check the tightness cutting blade bolts (7).

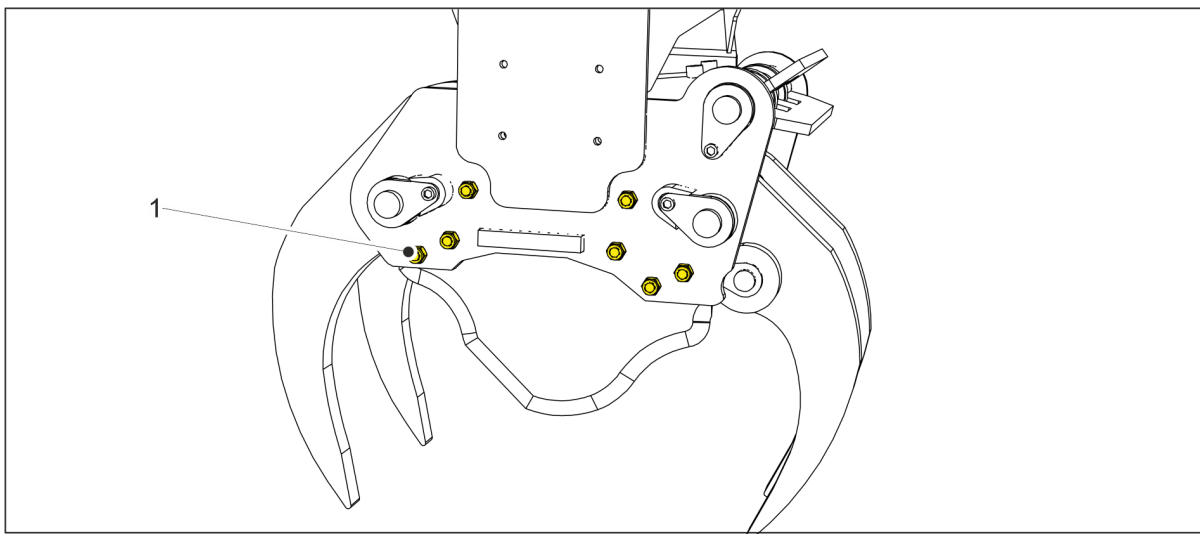

7.3.2 Checking the tree shear for cracks or fractures

Visually check the jaws and main body of the tree shear for cracks or fractures in the metal. If cracks or fractures are found, do not attempt to fix them. Instead, contact your local dealer.

7.3.3 Checking the condition of the cutting blade

 	DANGER Sharp blade hazard The blade can cause injuries and cuts. Observe caution when near the blade. Wear protective gloves when you handle the blade.
--	---

Visually check that the blade is not damaged, bent or dull. If the blade is dull or notched, sharpen it. Damaged or bent blade must be replaced.

7.3.4 Checking for hydraulic leaks

	DANGER Crushing hazard Moving parts in the tree shear can cause injuries or even death. Observe caution near the tree shear when the hydraulic lines are connected. Do not put your hands inside the tree shear when the hydraulic lines are connected.
---	---

  	DANGER Hydraulic fluid High pressure hydraulic fluid can cause injury or even death. Relieve the hydraulic pressure before maintenance. Wear protective gloves and goggles when handling hydraulic fluid.
---	---


Visually check the inflow and outflow hydraulic connections for leaks. Hydraulic leaks are more common in cold operating temperatures. If possible, pre-heat the hydraulic oil of the base machine before operation in cold temperatures.

If a leak is found, replace the hydraulic hose or connector.

7.3.5 Greasing the tree shear

Use good quality NLGI.2 multi-purpose grease for greasing the tree shear.

1. Add grease to the grease nipples. The location of the grease nipples is shown below.

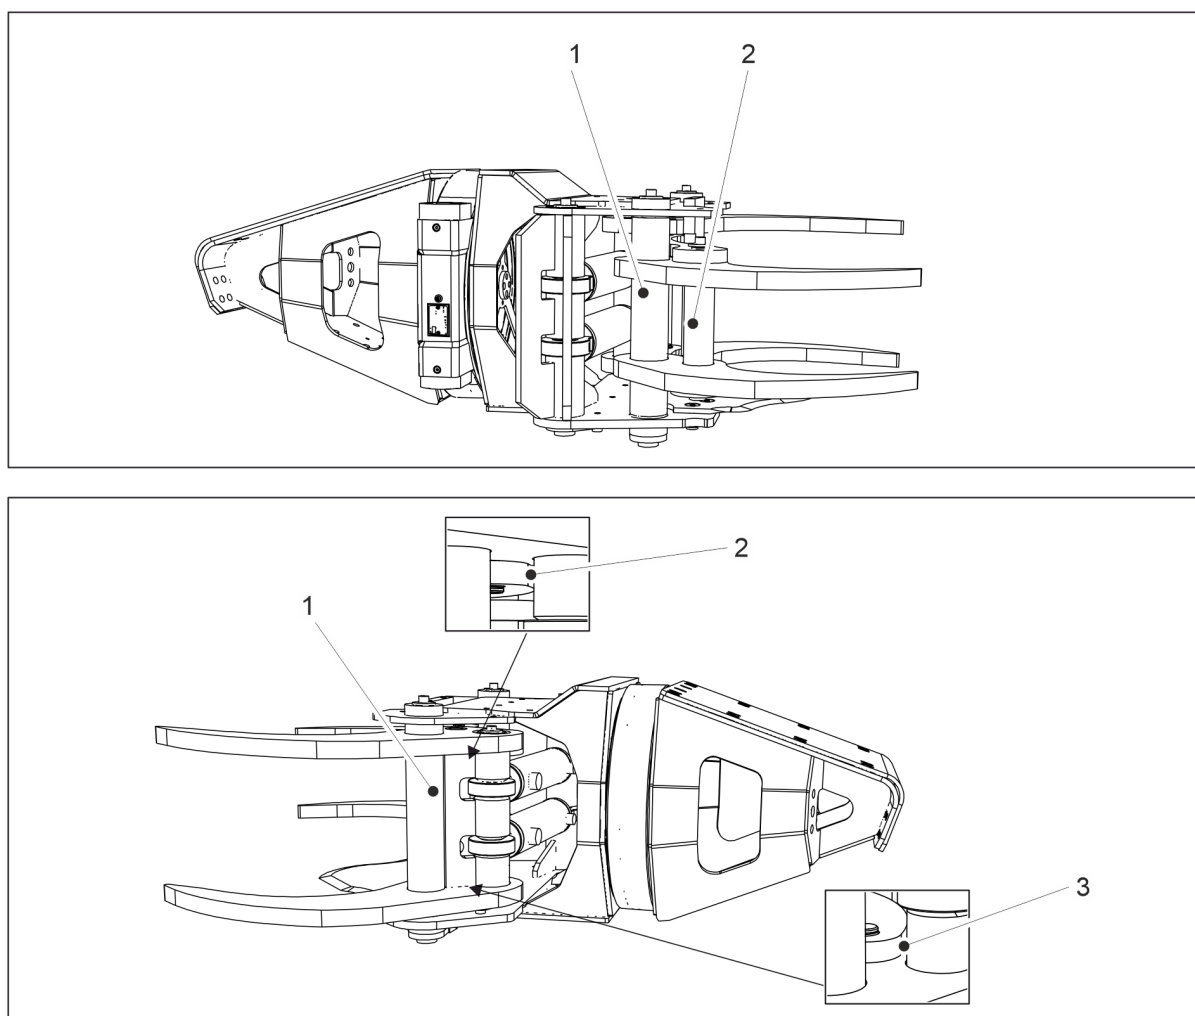

7.3.6 Cleaning the tree shear

The tree shear can be washed using a pressure washer. Check that no branches or debris remain inside the tree shear after washing.

7.3.7 Sharpening the cutting blade

	
	
	
	DANGER Sharp blade hazard The blade can cause injuries and cuts. Observe caution when near the blade. Wear protective goggles and gloves when you sharpen the blade.

	
	NOTE Excessive heat during sharpening can weaken the structure of the blade.

Use a battery powered angle grinder equipped with an abrasive disc for sharpening.

- Move the abrasive disc continuously when sharpening.
- Pause the sharpening if the blade becomes hot and let it cool down.
- Sharpen the blade equally from both sides.


7.3.8 Replacing the cutting blade

	
	
	DANGER Sharp blade hazard The blade can cause injuries and cuts. Observe caution when near the blade. Wear protective gloves when you handle the blade.

	
	NOTE Use an electrical wrench or alternatively a socket wrench with a 1 m extender at least.

Model	Part	Part number
TSR8EX	Blade GEN2	11203
TSR10EX	Blade GEN2	11204
TSR12-5EX	Blade GEN2	11205

1. Remove the cutting blade nuts (1-7) at the bottom of the tree shear.

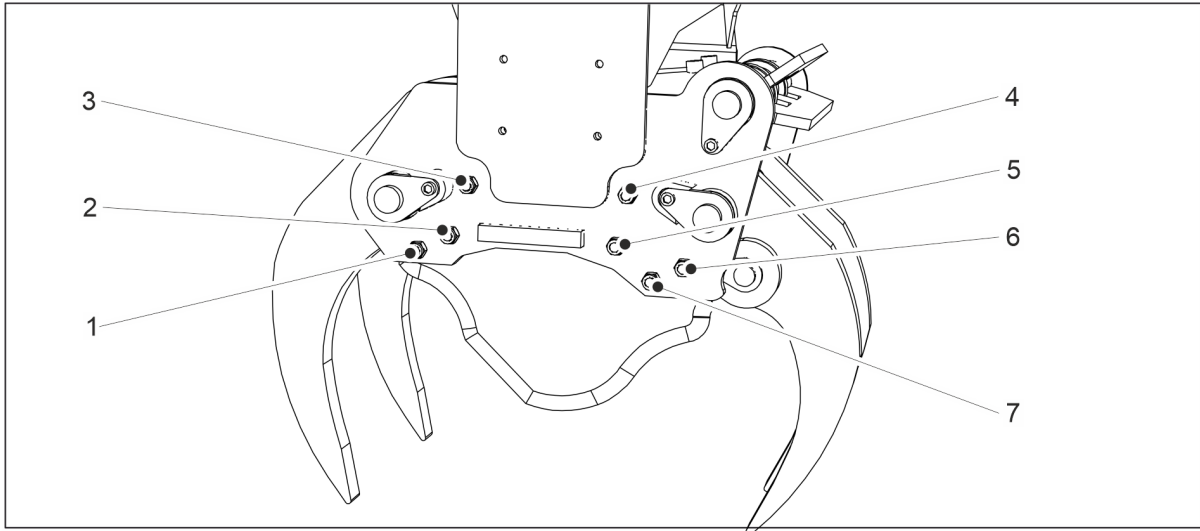

2. Remove the cutting blade bolts.

3. Remove the old blade.

4. Align the new blade with the bolt holes.

5. Attach the bolts.

6. Attach the nuts.

7.3.9 Replacing the hydraulic hose and connector

	DANGER Hydraulic fluid High pressure hydraulic fluid can cause injury or even death. Relieve the hydraulic pressure before maintenance. Wear protective gloves and goggles when handling hydraulic fluid.
---	---

1. Determine whether a hose or connector is the cause of the leak.
2. Prepare a spare hose or connector according to the leak.
3. Depressurize the hydraulic lines in the base machine. See manufacturers documentation.
4. Turn off the base machine.
5. Put a container underneath the hydraulic connection for any oil that might spill out.
6. Detach the leaking connector or connectors of the hose segment.
7. Attach the new connector or hose segment with its connectors.

7.4 Spare parts and maintenance contacts

For spare parts and service, contact your local dealer. When ordering spare parts, indicate the model and serial number of the tree shear. The information is found on the manufacturer's plate.

8. OPTIONS

8.1 Optional equipment available


Optional equipment	TSR8EX	TSR10EX	TSR12-5EX
Collector unit	X	X	X
Felling support	X	X	X
Avant rear part	X	X	
WL-TH* rear part	X	X	X
Coupling options for excavators	X	X	X
LP cylinder		X	X
Cable control (incl. 6/2 valve)	X	X	X
Radio control (Incl 6/2 valve)	X	X	X

* Wheel loaders and telehandlers


8.2 Adapters

The R-model tree shears can be equipped with different base machine adapters:


1. Excavator adapter

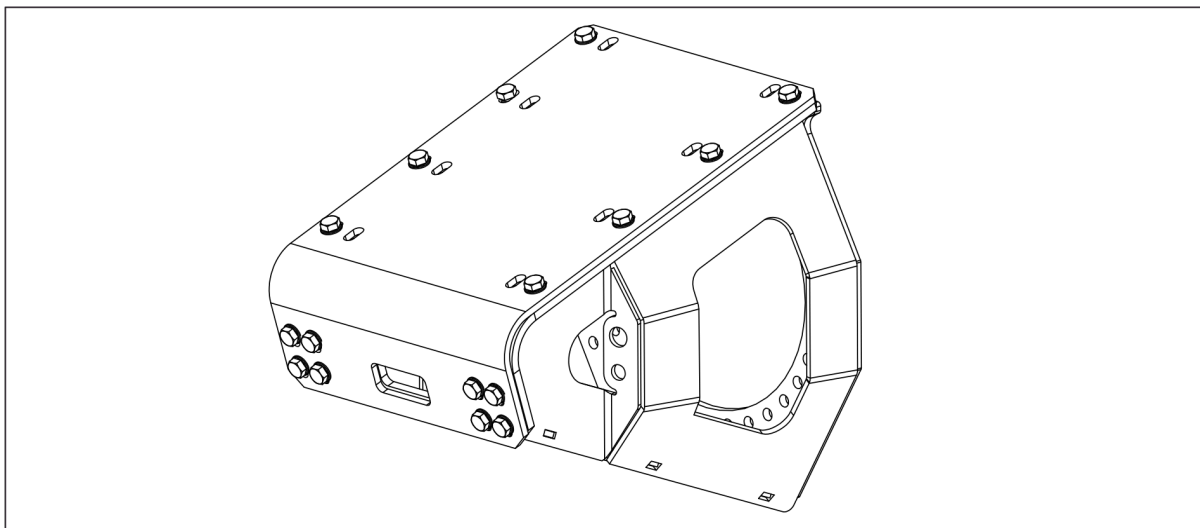

2. Multimount adapter for wheel loaders or telehandlers

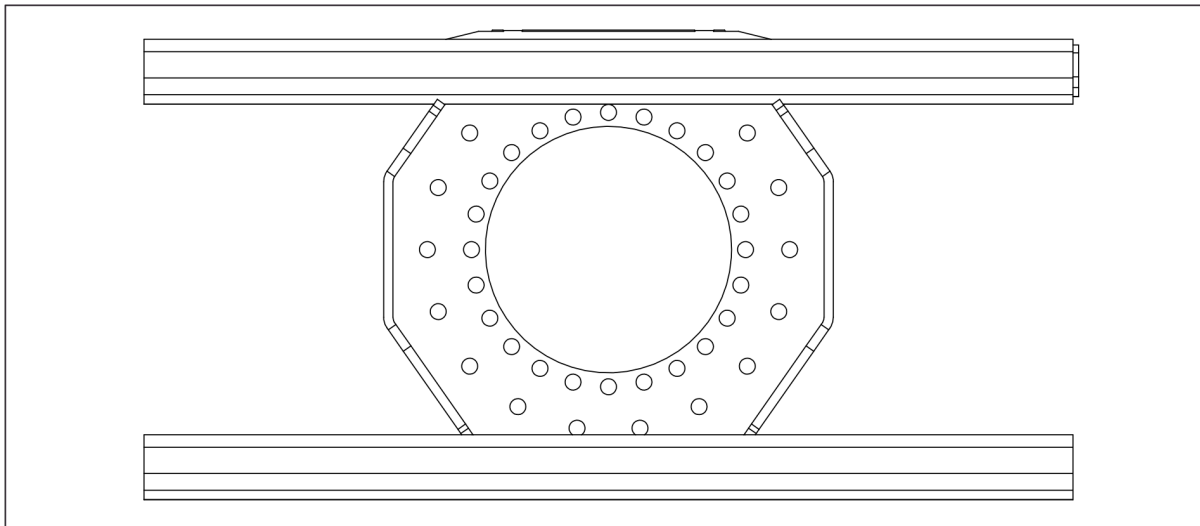

3. Avant loader adapter

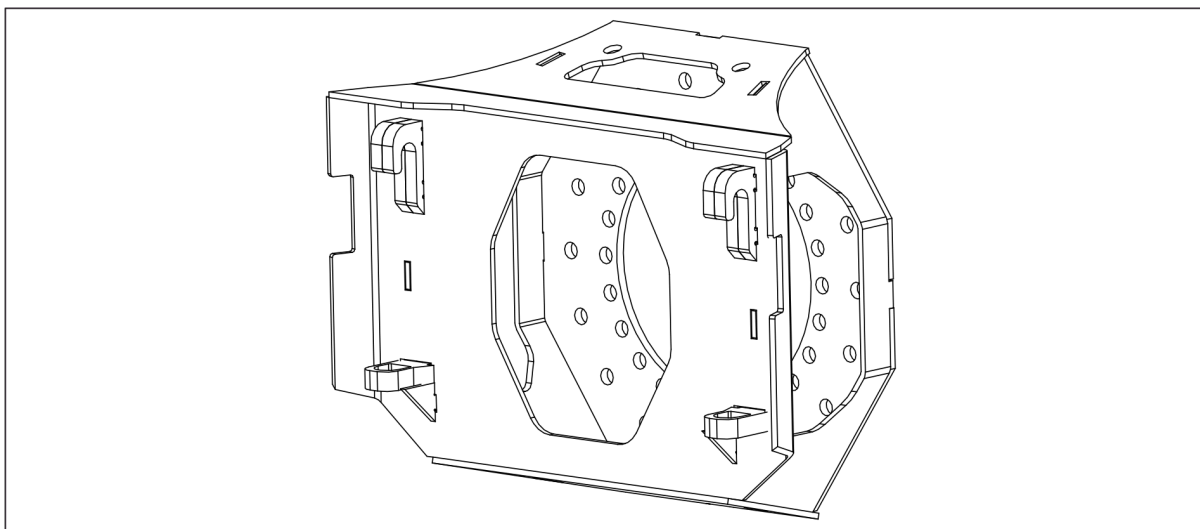

8.3 360° rotation system

360° rotation system consists of a rotator and a rotary manifold.

8.3.1 Rotator


8.3.1.1 Overview



WARNING

Damage to hydraulic hoses

The hydraulic hoses can get twisted when the tree shear rotates. Use a rotary manifold to protect the hydraulic hoses.

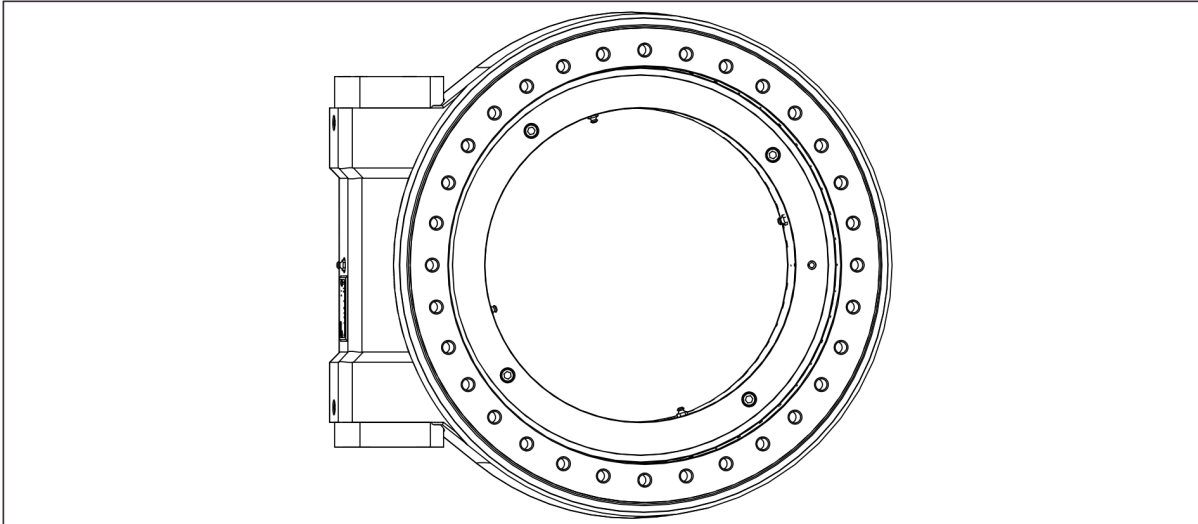


The rotator allows the tree shear to rotate along its axis. It provides more working angles for clearing trees, especially in difficult locations.


Tree shear model	TSR8EX	TSR10EX	TSR12-5EX
Rotator weight	94.8 lb	132.3 lb	183.0 lb
Rotator mounting clip weight	11 lb	11 lb	11 lb

8.3.1.2 Installation


1. Detach the adapter from the tree shear.
2. Attach the rotator to the tree shear with bolts (1). The quantity of the bolts and nuts varies according to the tree shear size.

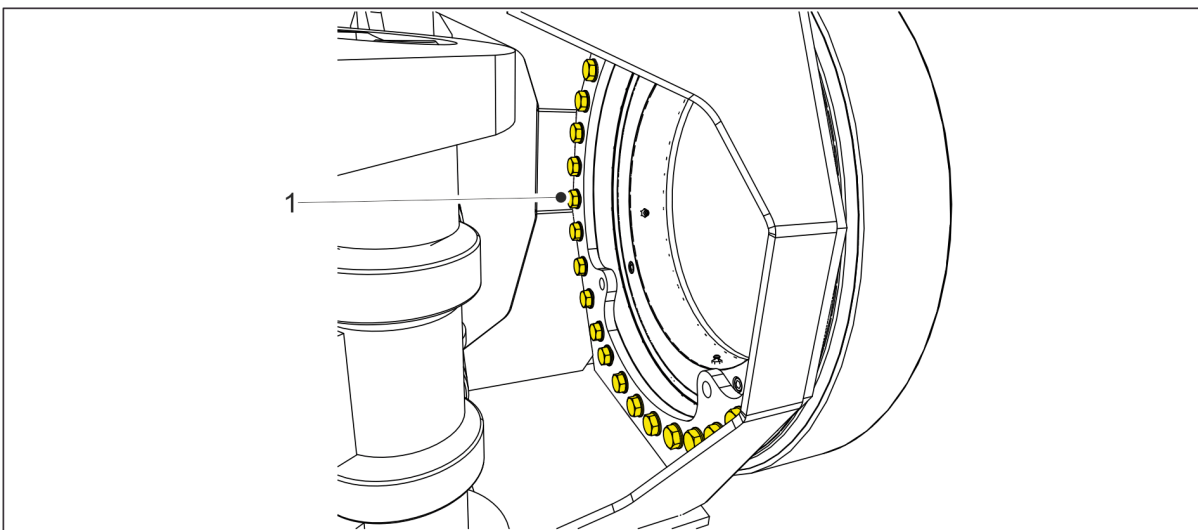

3. Attach the rotary manifold (1) to the rotator with bolts(2), 3 pcs.

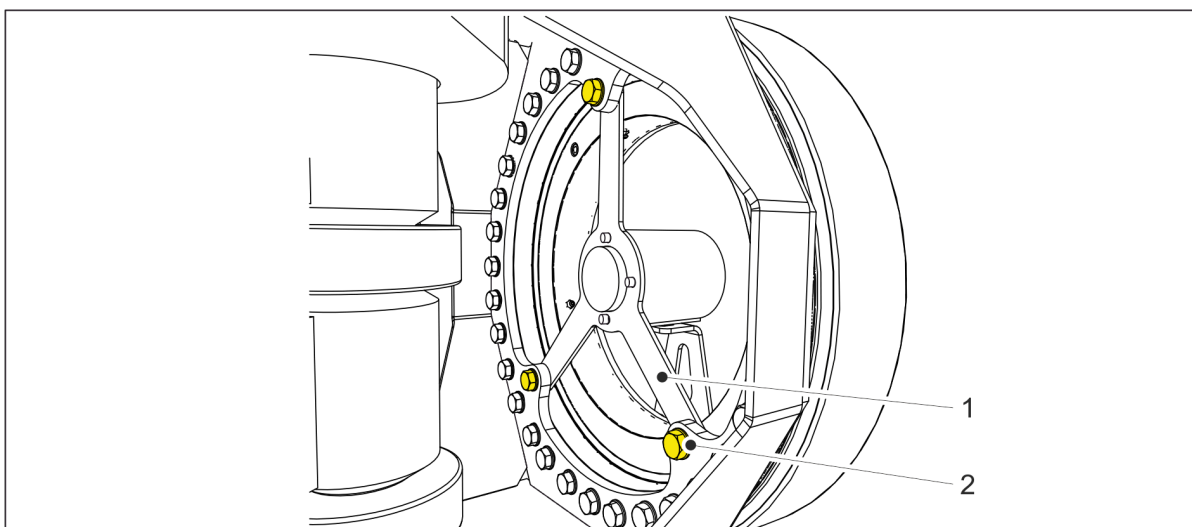


4. Attach the adapter to the rotator with bolts (1). Use 2 of the bolts to attach the rotary manifold back bracket (2).

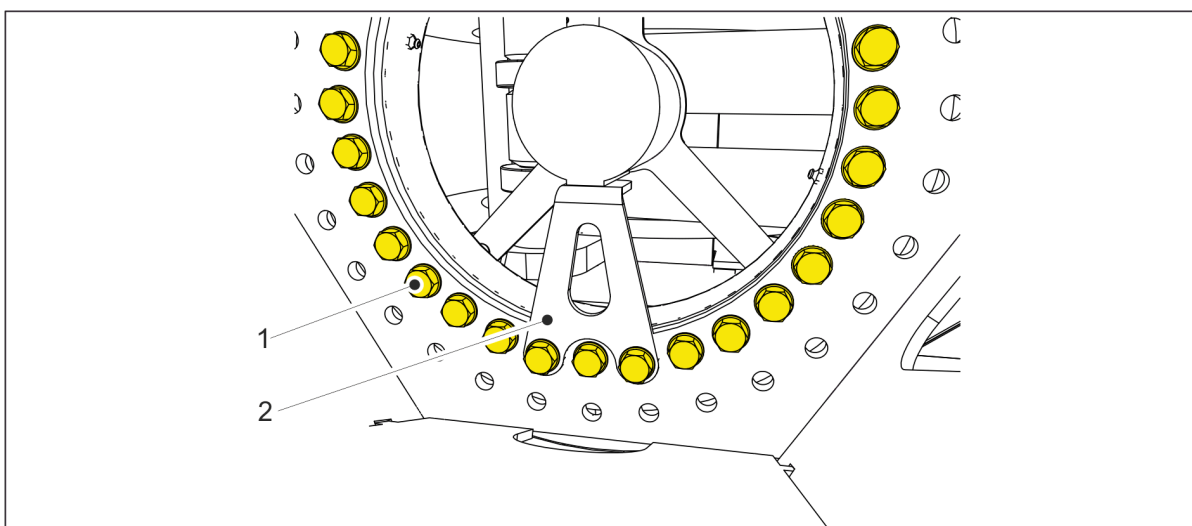

5. Attach the hydraulic lines to the rotator. For details, refer to the rotator manufacturer's instruction.

6. If you attached the excavator adapter, secure the connectors from the rotator hydraulic hoses (1) onto the sides of adapter.

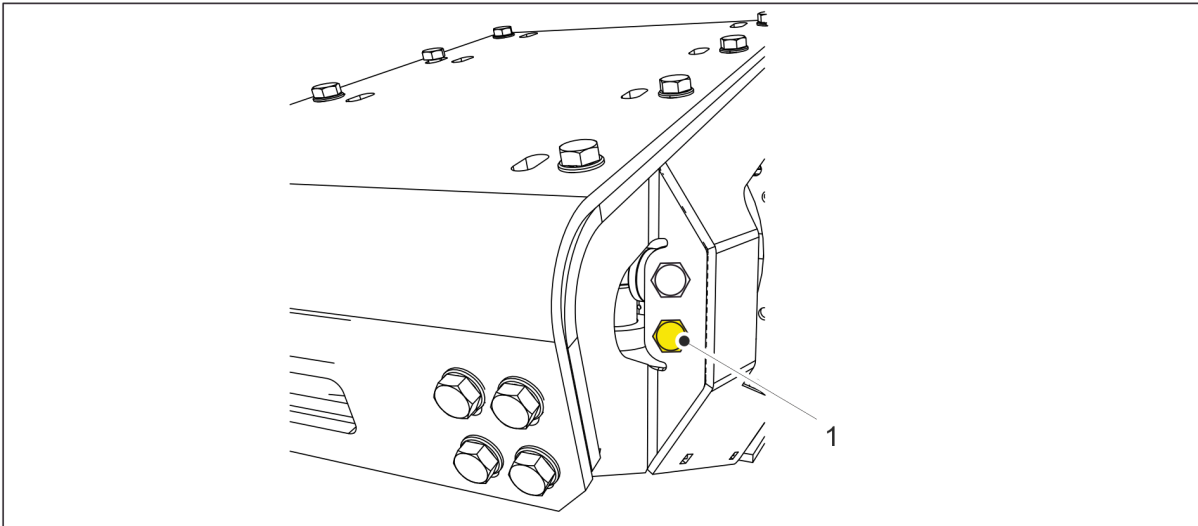


7. Attach the hydraulic hoses to the rotary manifold. For details, refer to the rotary manifold manufacturer's instruction.

8.3.1.3 Maintenance

For rotator maintenance instructions, refer to the manufacturer's instruction.

8.3.2 Rotary manifold

8.3.2.1 Overview

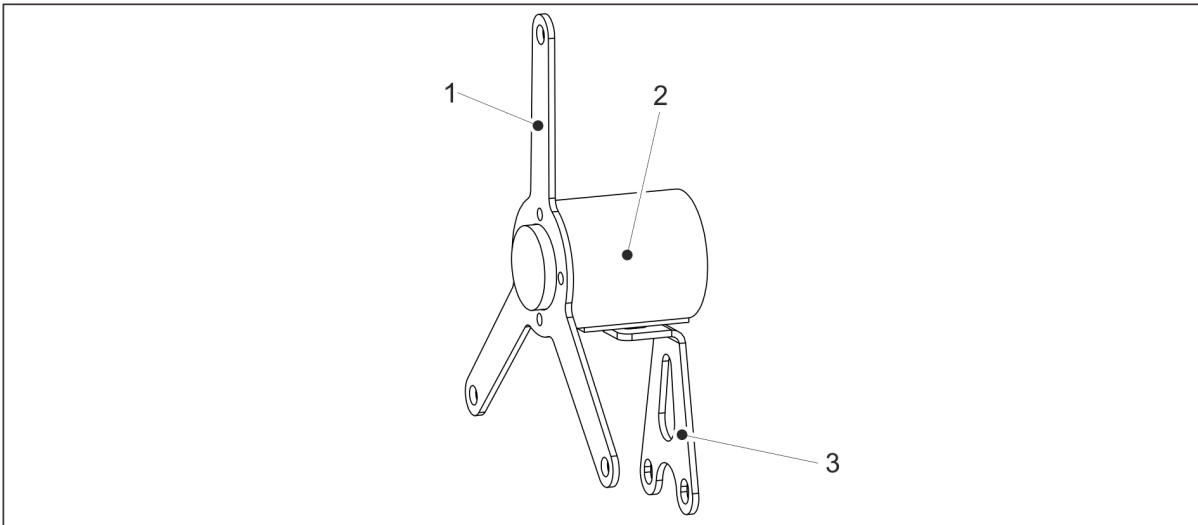

1	Front bracket
2	Rotary manifold
3	Back bracket

The rotary manifold allows the tree shear to be rotated indefinitely in both directions when the rotator is installed. The hydraulic hoses of the tree shear pass through the rotary manifold without a risk of being twisted when the tree shear rotates. Each R-model tree shear has its own size of rotary manifold.

Tree shear model	TSR8EX	TSR10EX	TSR12-5EX
------------------	--------	---------	-----------


Rotary manifold weight with front and rear mounting brackets	15 lb	26.4 lb	26.46 lb
--	-------	---------	----------

8.3.2.2 Installation

For rotary manifold installation instructions, refer to rotator installation chapter 8.3.1.2 Installation.

8.4 Collector unit

8.4.1 Overview


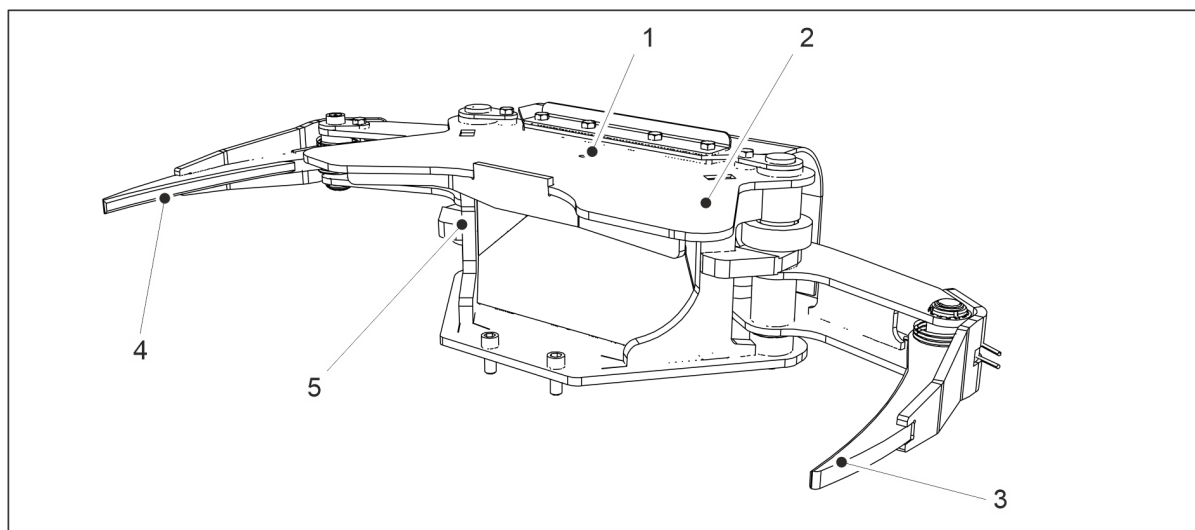


1	Lifting loop thread
2	Tree support
3	Left jaw
4	Right jaw
5	Collector unit frame

The collector unit has two smaller hydraulic jaws that collect and hold the cut trees while the tree shear falls more trees. When the collector unit is full, the cut trees can be moved to a new location as a bunch to save time. The collector unit is especially useful when cutting densely growing smaller trees. The collector unit is installed on top of the tree shear.

8.4.1.1 Product identification

The location of the manufacturer's plate (1) is shown below.

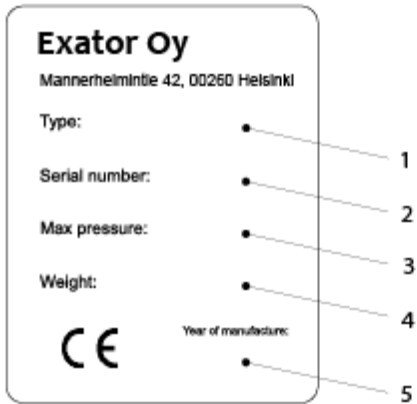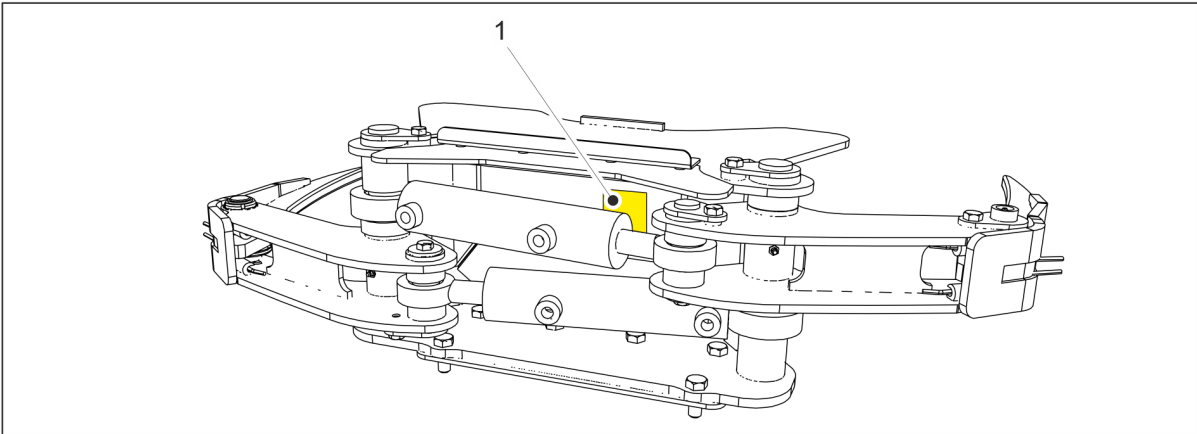

Location	Information
1	Type
2	Serial number
3	Maximum pressure
4	Weight
5	Year of manufacture

8.4.2 Installation

8.4.2.1 Lifting the collector unit




DANGER

Lifting hazard

The unit is heavy and can cause injuries if lifted.
Do not lift the unit on your own. Use a lifting aid.

Product name	TSR8EX	TSR10EX	TSR12-5EX
Collector unit weight	121.2 lb	169.7 lb	264.5 lb

The unit can be lifted using a lifting strap or hook. Install the lifting loop (1) on top of the collector unit for lifting.

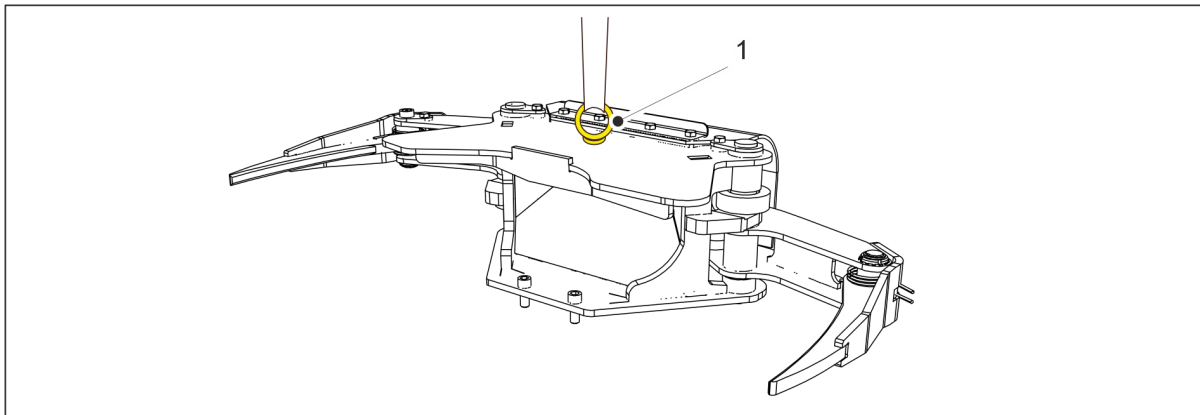


8.4.2.2 Installing the collector unit



Installing the collector unit raises the weight of the tree shear and can affect balance.

1. Clean the threads using pressurized air and degreaser.
2. Move the collector unit above the tree shear.

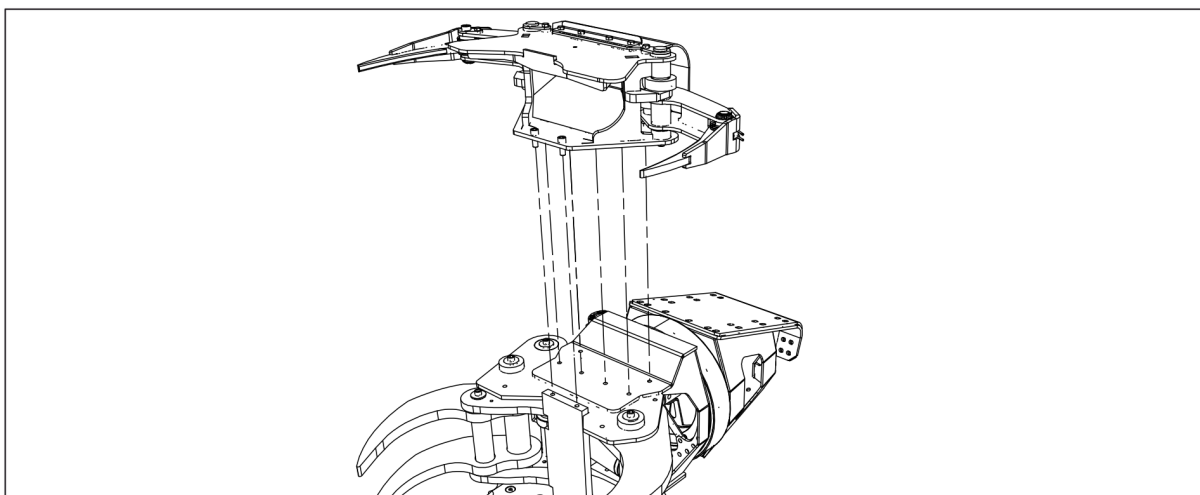

3. Tighten the bolts.
4. Install the hydraulic lines to the connectors at the back of the collector unit: right connector closes, left connector opens.

8.4.3 Operation

8.4.3.1 Operating the collector unit



WARNING

Risk of damage to the equipment


Before you cut a tree, make sure the collector unit is closed.



NOTE


Cut the tree bundle on the ground if the bundle is too long to be transported from the stacking location.

1. Make sure the collector unit (1) is closed.

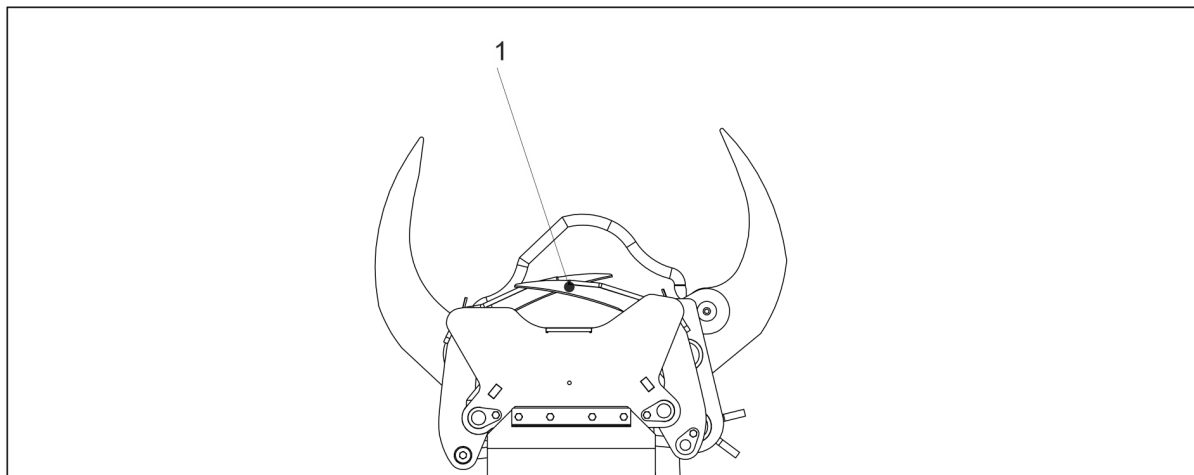


2. Place the tree bundle between the cutting side jaws (1) and the cutting blade (2).


The collector unit (3) must be closed.

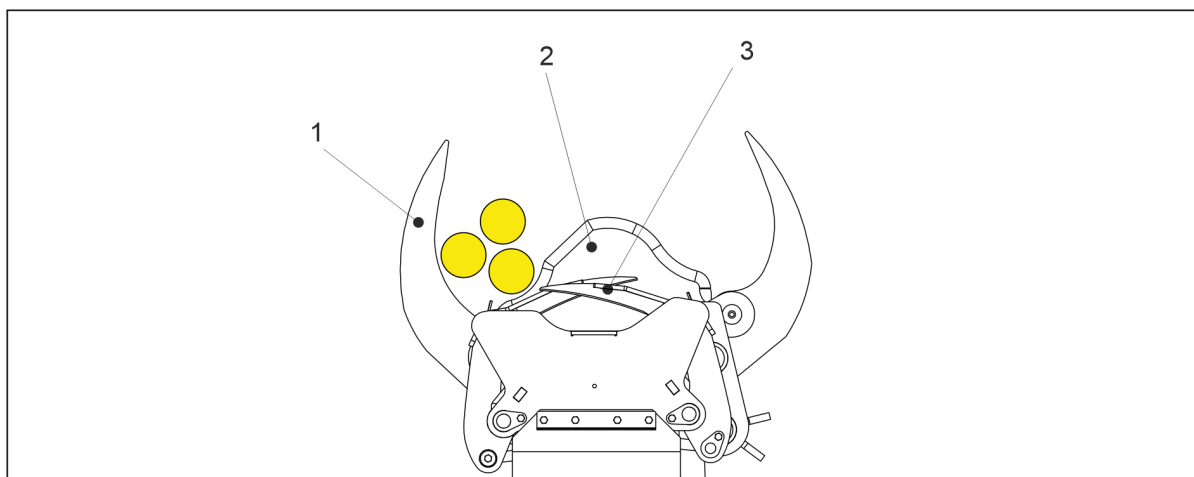


3. To cut the tree bundle, close the jaws (1). Now the jaws hold the tree bundle. The collector unit (2) is closed.

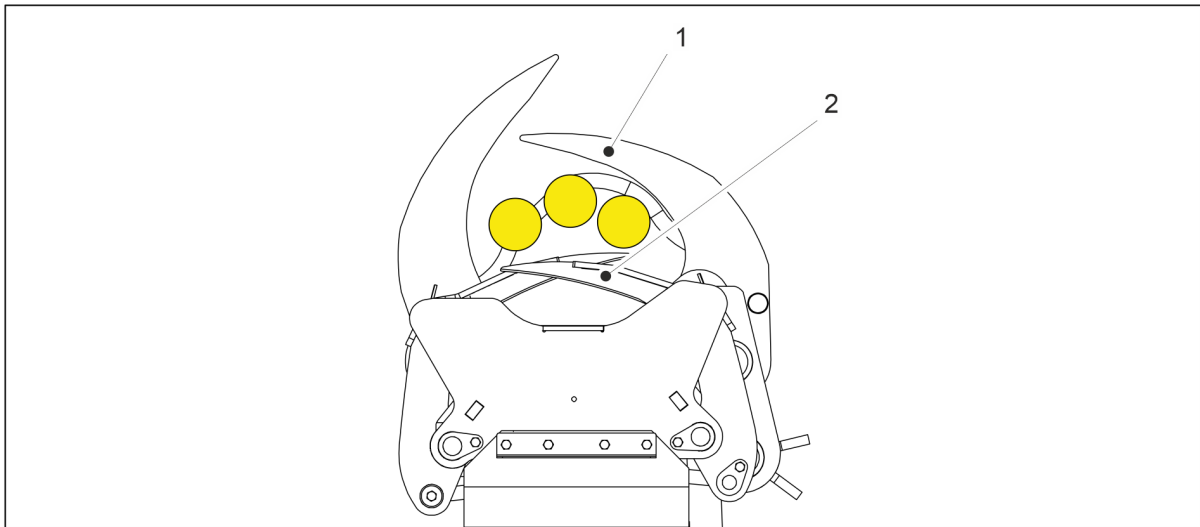


4. Open the collector unit (1).

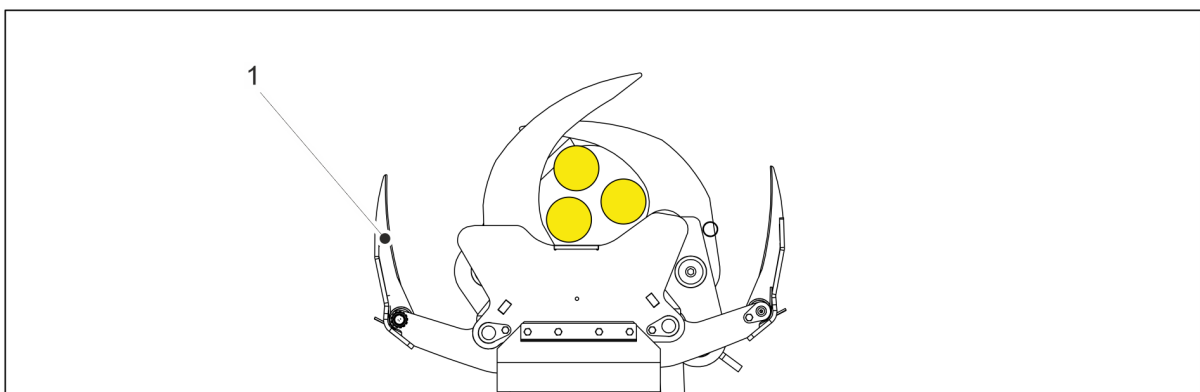

5. Close the collector unit (1).

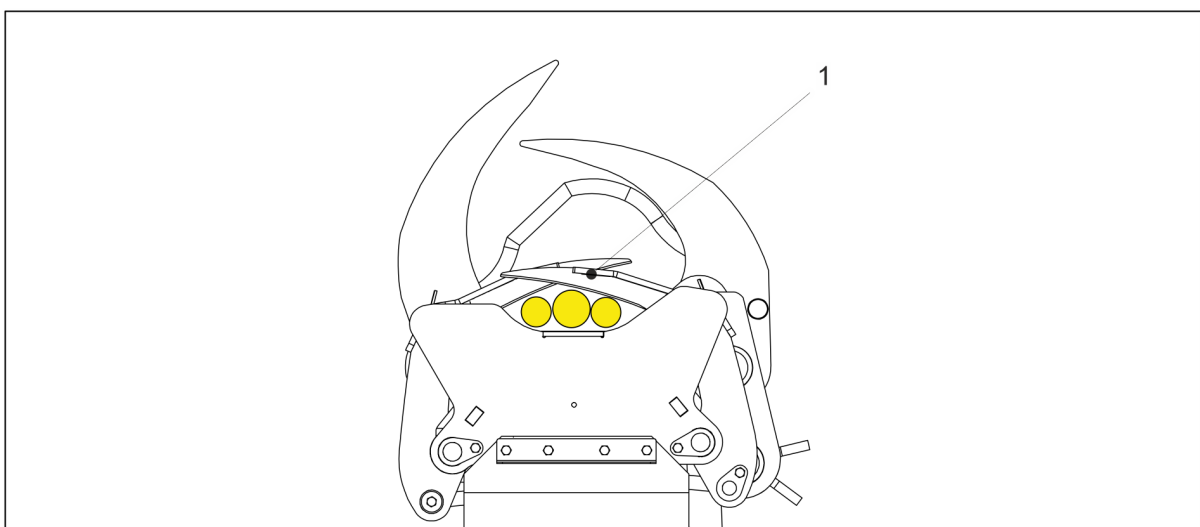

6. Open the jaws (1). Now the collector unit (2) holds the tree bundle.

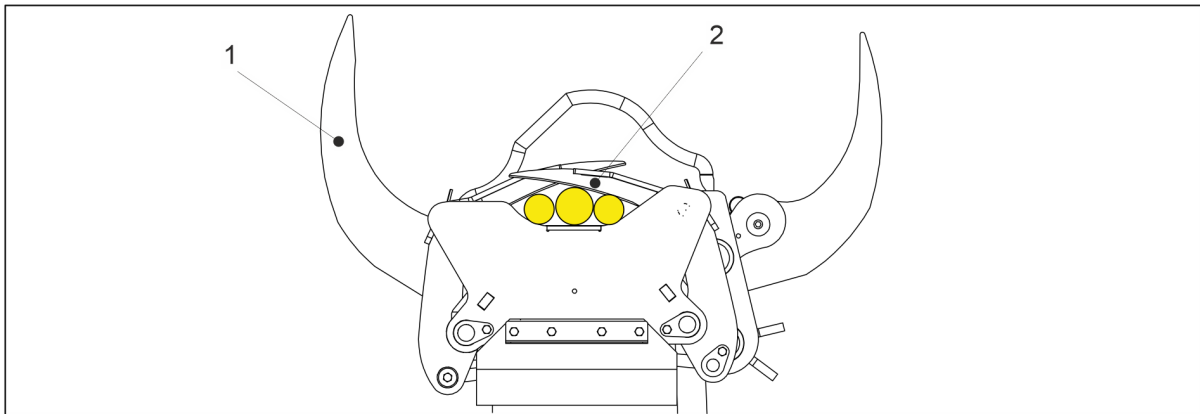

7. Repeat steps 1, 2, 3, 4, 5 and 6 until the jaws can no longer cut the tree or the collected tree bundle becomes unstable.



NOTE

Long tree trunks are more unstable than short trunks. Danger of falling trunks and branches. Observe the collected tree bundle in case it starts to fall apart.

8. After the last succeeded cut, close the jaws.

9. Move the tree bundle to a stacking location on the ground.

10. To release the tree bundle, open the collector unit first and after that open the jaws.



WARNING

Risk of damage to the equipment

Always open the collector unit first when releasing the tree bundle on the ground. This way the collector unit doesn't hold all the weight of the tree bundle.

8.4.4 Daily maintenance

Maintenance tasks

Grease the collector unit


Clean the collector unit

Check the collector unit

8.4.4.1 Greasing

Use good quality NLGI.2 multi-purpose grease for greasing.

Apply grese to the grese nipples (1-6).

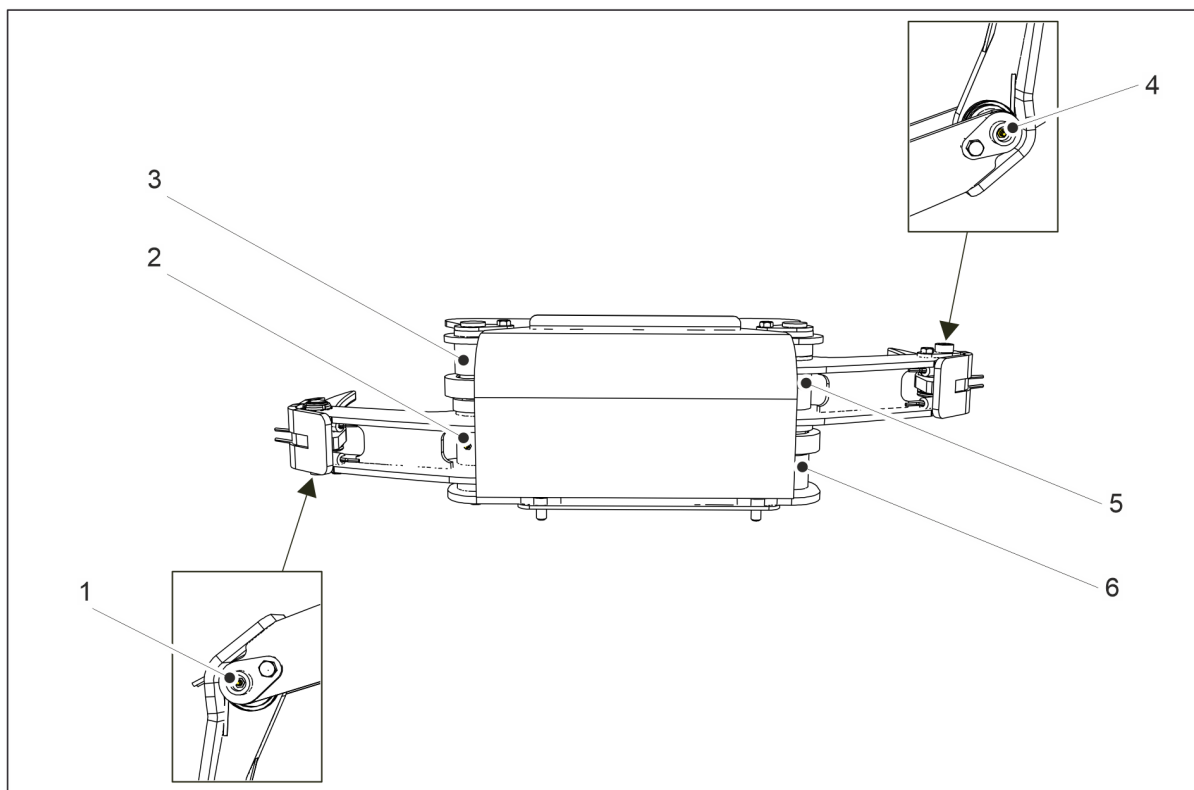

8.4.4.2 Cleaning the collector unit

After using the collector unit, clear out any branches, snow or debris from inside the unit.


The unit can be washed with a pressure washer.

8.4.4.3 Checking the collector unit

1. Check the tightness of the bolts.
2. Check that there are no hydraulic leaks.
3. Check that there are no cracks or fractures in the collector unit.

8.5 Felling support

8.5.1 Overview

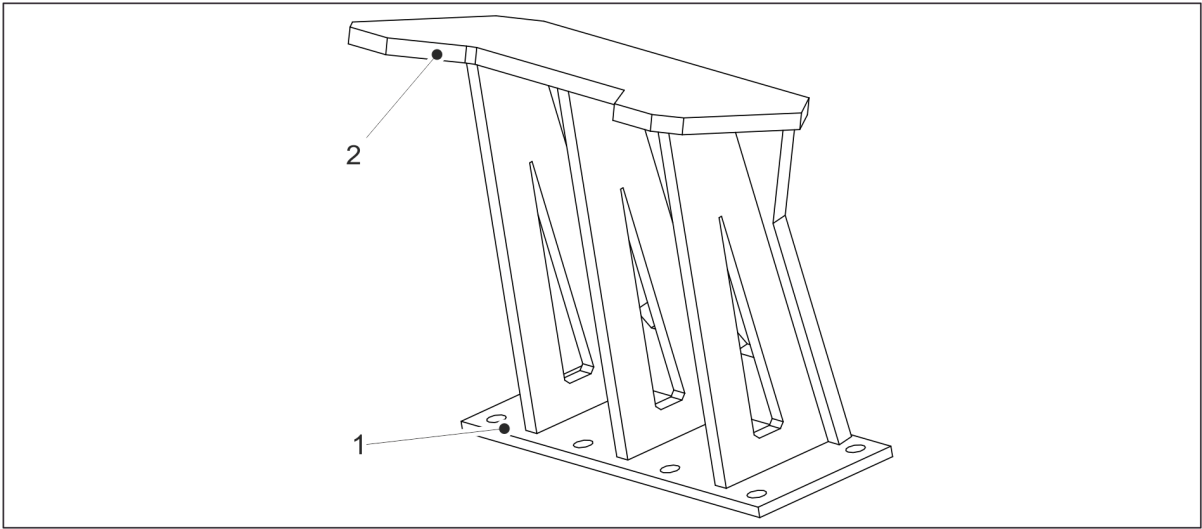


1	Connecting plate
2	Tree support

The felling support adds more height to the buffer plate of the tree shear. The height makes it easier to control the felled tree and keep it intact after cutting. The felling support is necessary for example when felling trees that are fragile due to decay.

Product name	TSR8EX	TSR10EX	TSR12-5EX-5
Felling support weight	19.8 lb	28.6 lb	72.7 lb

8.5.2 Installation

- 1. Clean the attachment surface on top of the tree shear.
- 2. Lower the felling support (1) on top of the attachment surface (2) on the tree shear.

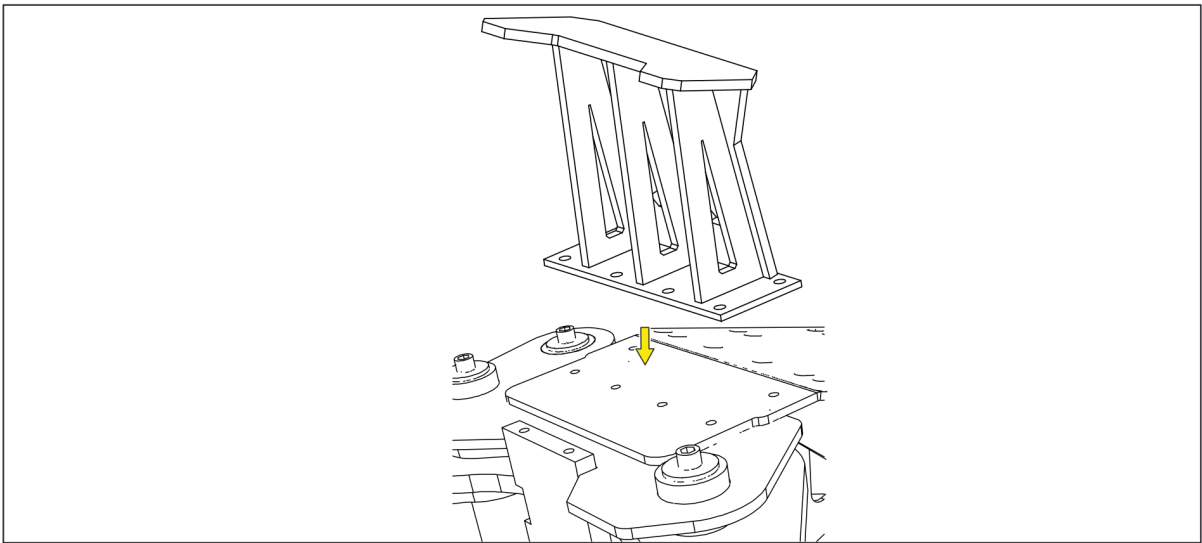

3. Align the felling support with the bolt holes on the tree shear.
4. Attach the bolts. The quantity of bolts varies according to the tree shear size.

8.5.3 Daily maintenance

1. Check the tightness of the attachment bolts.
2. Check that there are no cracks or fractures on the felling support.

8.6 eBoost® hydraulic system

8.6.1 Adjustment instructions

The eBoost® is always pre-set at the factory.
This instruction is for troubleshooting purposes.


1. See the picture below.
2. Remove the protective cap nut (1).
3. Loosen the lock nut (2) and adjust the screw (3) to the desired value using a hex key.
4. Tighten the lock nut (2).
5. Reattach the cap nut (1).

FAULT SITUATION:

The tree shear moves quickly, but does not cut a large tree.	Adjust the screw upwards/ counterclockwise
The tree shear moves slowly.	Adjust the spindle downwards/ clockwise.



NOTE
Max opening 28 mm

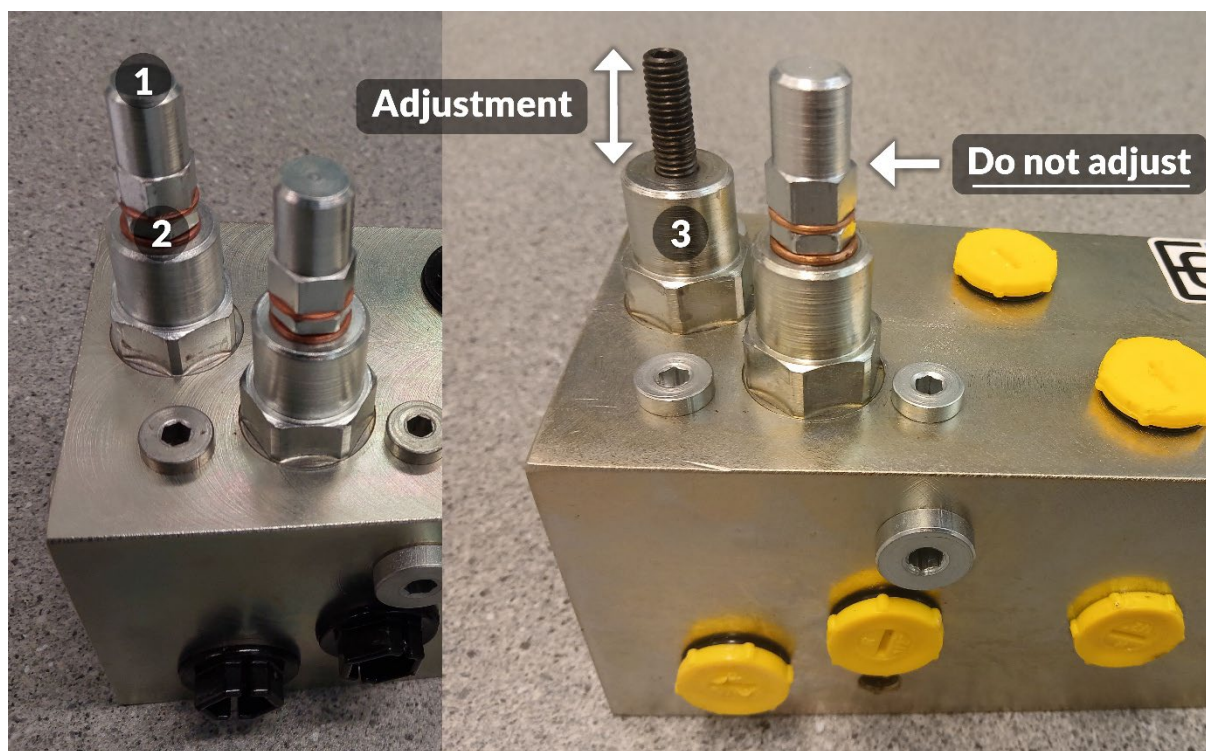

9. ATTACHMENTS

Warranty

Warranty period is model and equipment specific, confirm the warranty period length from the reseller.

The warranty period starts on the date of purchase.

Warranty does not cover:

- Cutting blades and hydraulic hoses.
- Defects caused by wear or prohibited use. For prohibited and intended use of the equipment, read the instruction manual.
- Loss of earnings and other indirect costs from down time.
- Costs due to transporting the equipment to warranty repair.

Warranty is void if:

- Other than original parts are used on the tree shear.
- The owner of the tree shear changes during the warranty period.
- The tree shear is used in temperatures below -15 °Celsius.

Warranty repairs are performed at the facilities of the manufacturer or the retailer.

The warranty repair is carried out within a reasonable time, maximum of 4 weeks.